

Fuel Pressure Regulator, Remove and Install



Remove

Vacuum line (2) from the fuel pressure regulator.

Fuel pressure regulator from the fuel distribution pipe – bolts (1).



Install

Fuel pressure regulator into the fuel distribution pipe – bolts (1).

Vacuum line (2) to the fuel pressure regulator.

