

Intake Air Temperature Sensor, Remove and Install



Remove

Wiring harness connector from the intake air temperature sensor (1).


Intake air temperature sensor (1) from the intake duct.



Install

Intake air temperature sensor (1) in the intake duct.

Wiring harness connector to the intake air temperature sensor (1).

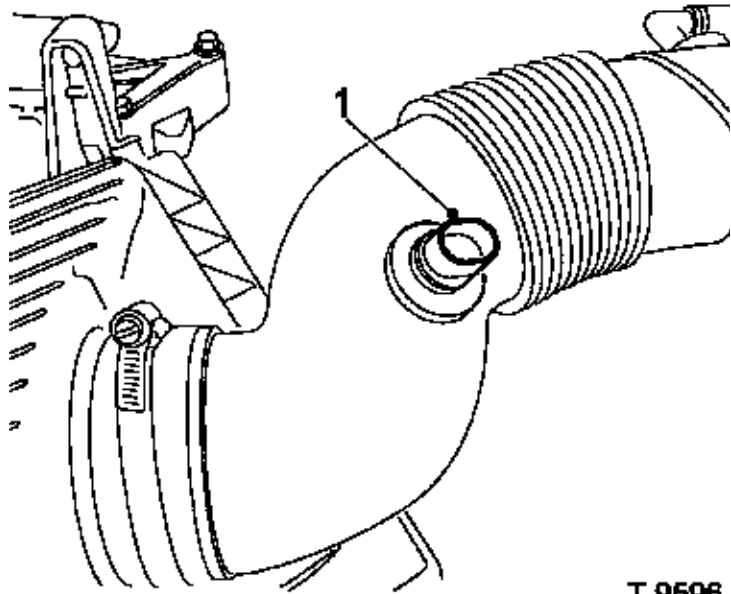

T 9596