


Starter Motor, Remove and Install



Remove

Underbody cover – see operation "Underbody Cover, Remove and Install" in Group A.

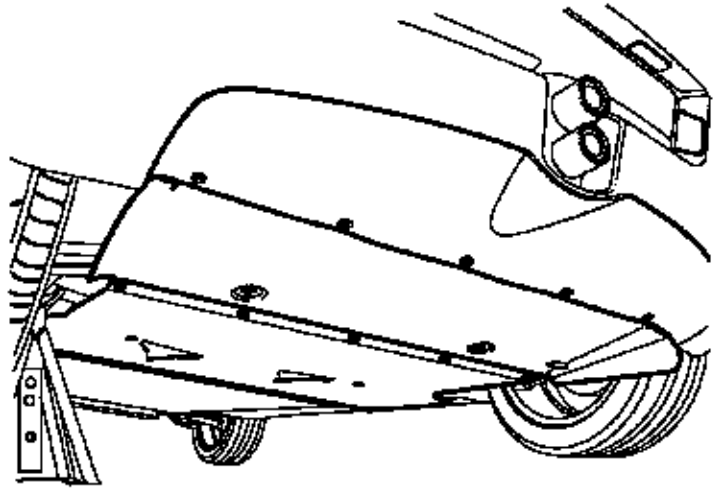

T 9649

Wiring harness connector (arrow) from the starter motor.


Starter motor – bolts.




Install

Starter motor – bolts **40 Nm**.

Wiring harness connector (arrow) to the starter motor.

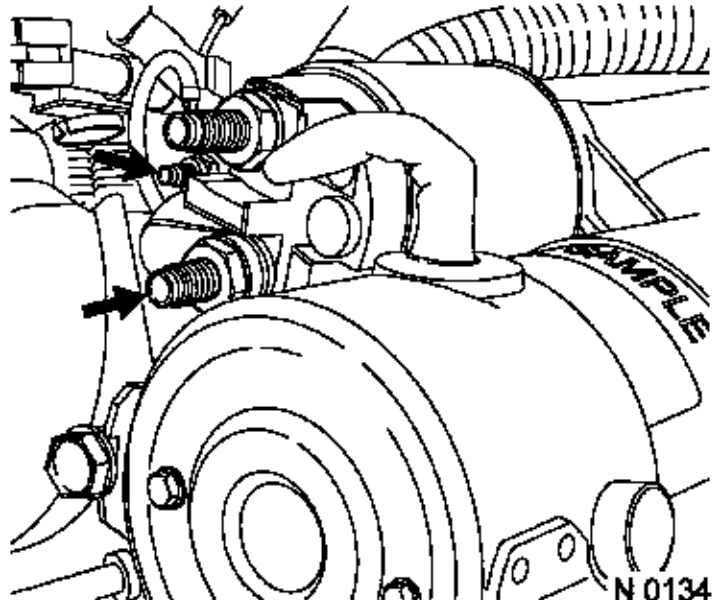

Underbody cover – see operation "Underbody Cover, Remove and Install" in Group A.

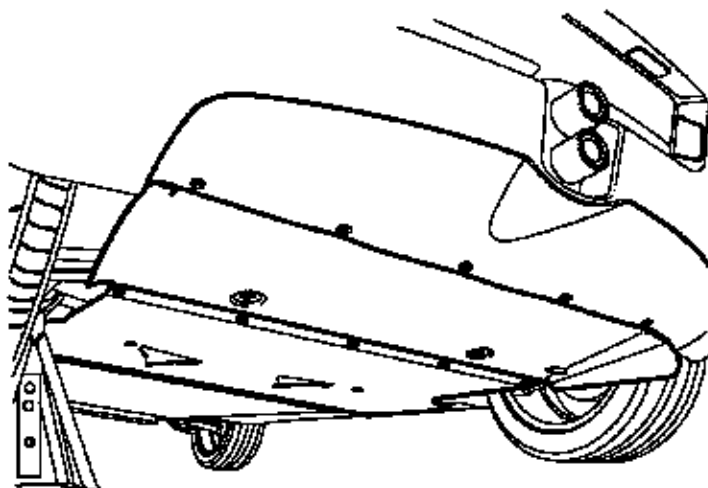

T 9649