



Cylinder Head Cover, Remove and Install (Z 22 SE)

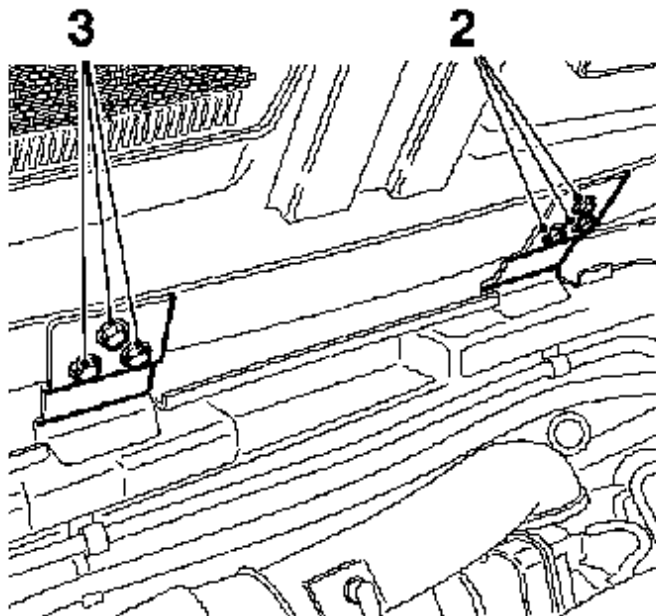


Remove

1. Open the bonnet.
2. Disconnect the battery.
3. Open the engine cover (1).
4. Detach the engine cover.
 - 6 bolts (2) and (3)

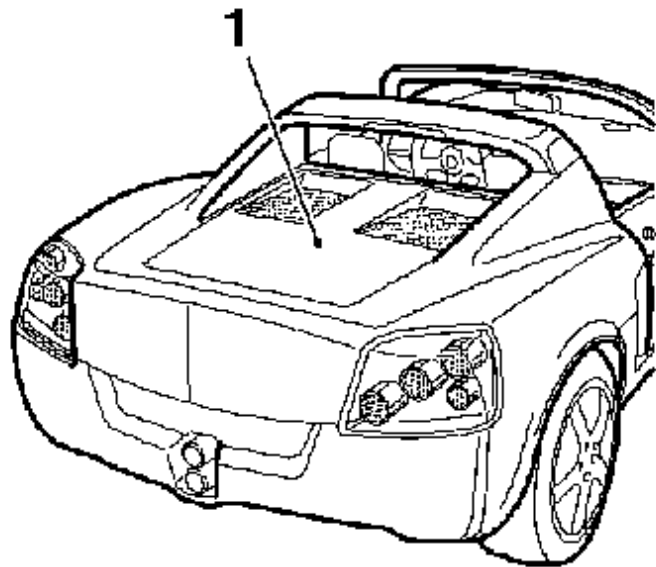


L0008715

5. Detach the ignition module (1).
 - Release and detach the wiring harness connector.
 - 4 bolts (2)

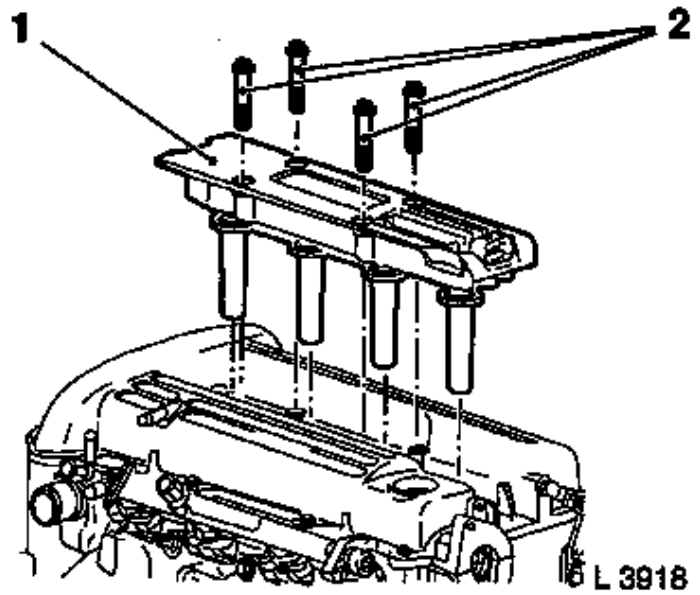

6. Remove the cylinder head cover.


- Detach the fuel line bracket.
 - 2 bolts
- Detach the engine breather hose (2).
- Detach the engine lifting eyes (5) and (6).
 - 2 bolts, 1 nut
- Detach the ground cable (7).
 - 1 bolt
- 12 bolts (1), (3), (4) and (8)

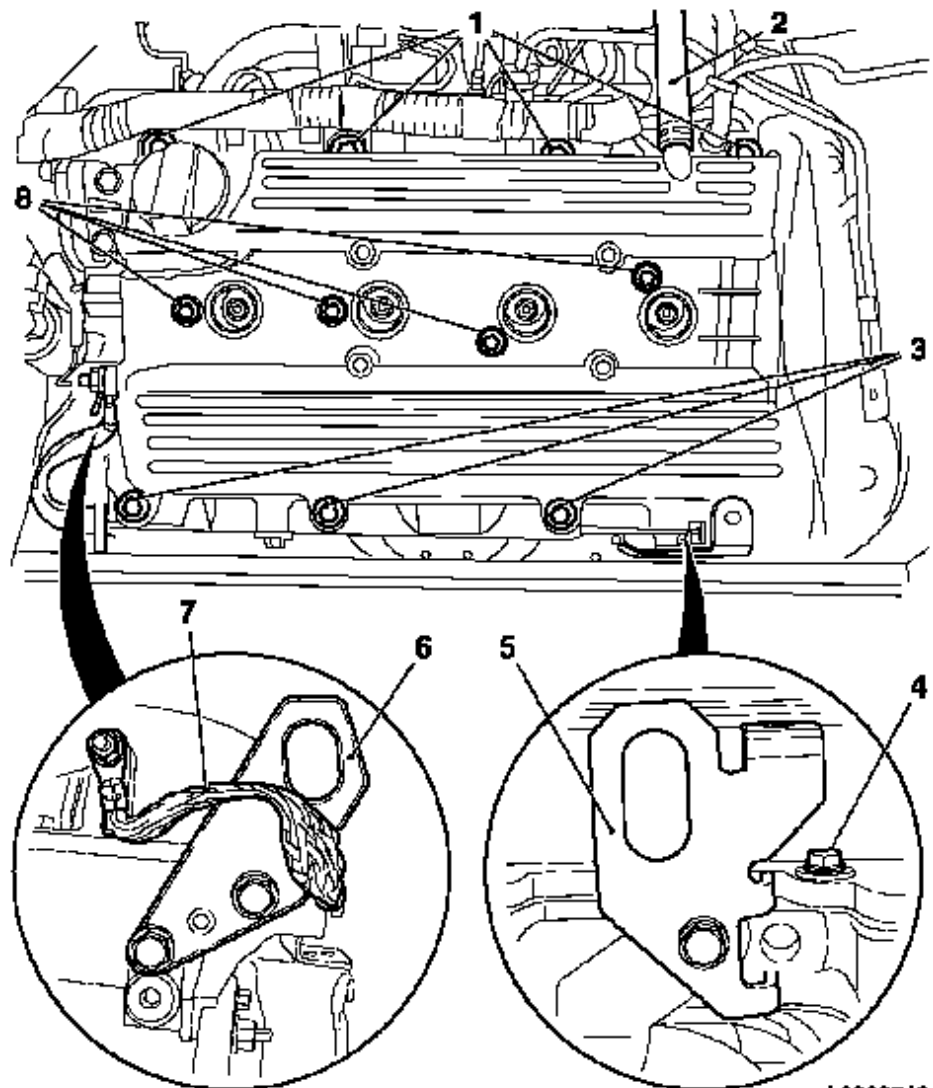

L0008718

**Install**

7. Attach the cylinder head cover
 - Clean the sealing surfaces.
 - Use new gaskets.
 - **Note:** The sealing lips of the seals (1) must be inserted into the groove on the cylinder head cover.
 - Tightening torque **9 Nm**
 - Attach the ground cable
 - Tightening torque **9 Nm**
 - Attach the engine lifting eyes.
 - 2 bolts, 1 nut
 - Attach the engine breather hose.
 - Attach the fuel line bracket.
 - Tightening torque **8 Nm**
8. Attach the ignition module.
 - Tightening torque **9 Nm**
 - Attach and secure the wiring harness connector.
9. Install the rear engine cover.
 - Check the alignment.
 - 6 bolts, tightening torque **14 Nm**
10. Close the rear engine cover.
11. Connect the battery.
12. Close the bonnet.
13. Reprogram the volatile memories.

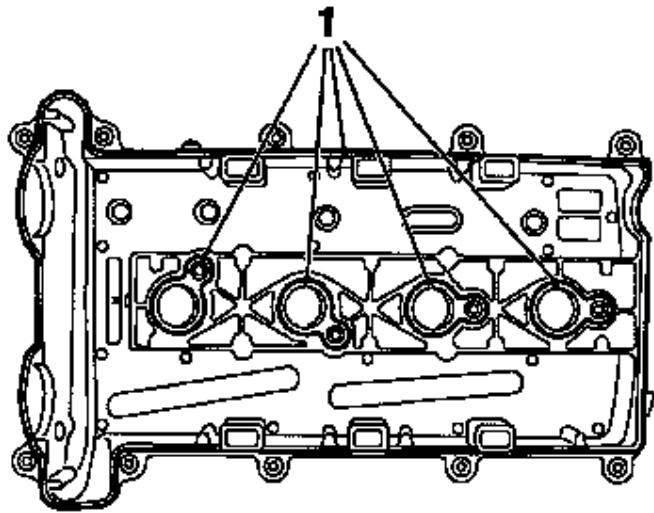**L 5706**