


Camshaft Connection Flange Cover, Replace (Z 22 SE)

1. Open the rear engine cover.
2. Remove the camshaft connecting flange cover (1).
 - 2 bolts (2)
3. Install the camshaft connecting flange cover.
 - Use a new gasket.
 - 2 bolts
 - Tightening torque **23 Nm**

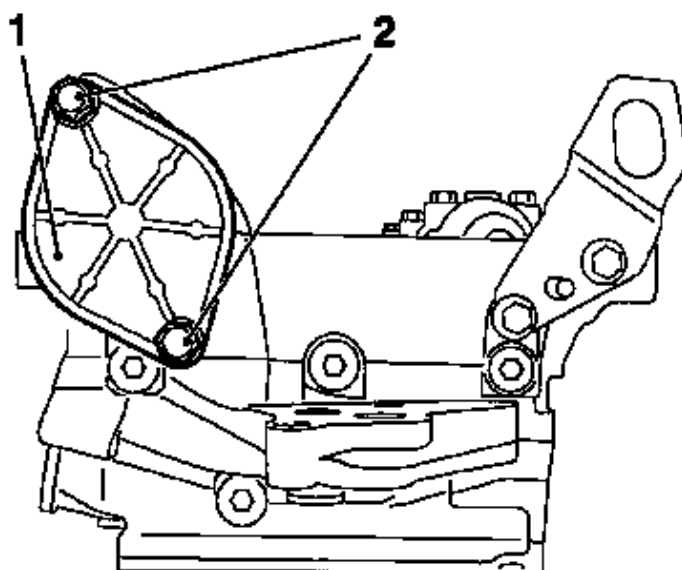

L 5744