

Cylinder Block, Check for Plane Surface (Z 22 SE, Z 20 LET)

1. Clean the sealing surfaces.
 - Remove any gasket residue.
2. Check for plane surface.
 - Check the cylinder block at the sealing surfaces for flexing (across and lengthways) and across the diagonals for distortion.
 - Use a straightedge, feeler gauges

