


Fuel Pump Relay, Remove and Install (Z 22 SE)

1. Open the bonnet.
2. Disconnect the battery.
3. Open the rear engine cover.
4. Remove the fuel pump relay (1).
 - Pull it out from the socket.
5. Install the fuel pump relay.
 - Push it into the socket.
 - Check that the electrical contacts are good.
6. Close the rear engine cover.
7. Connect the battery.
8. Reprogram the volatile memories.
9. Close the bonnet.

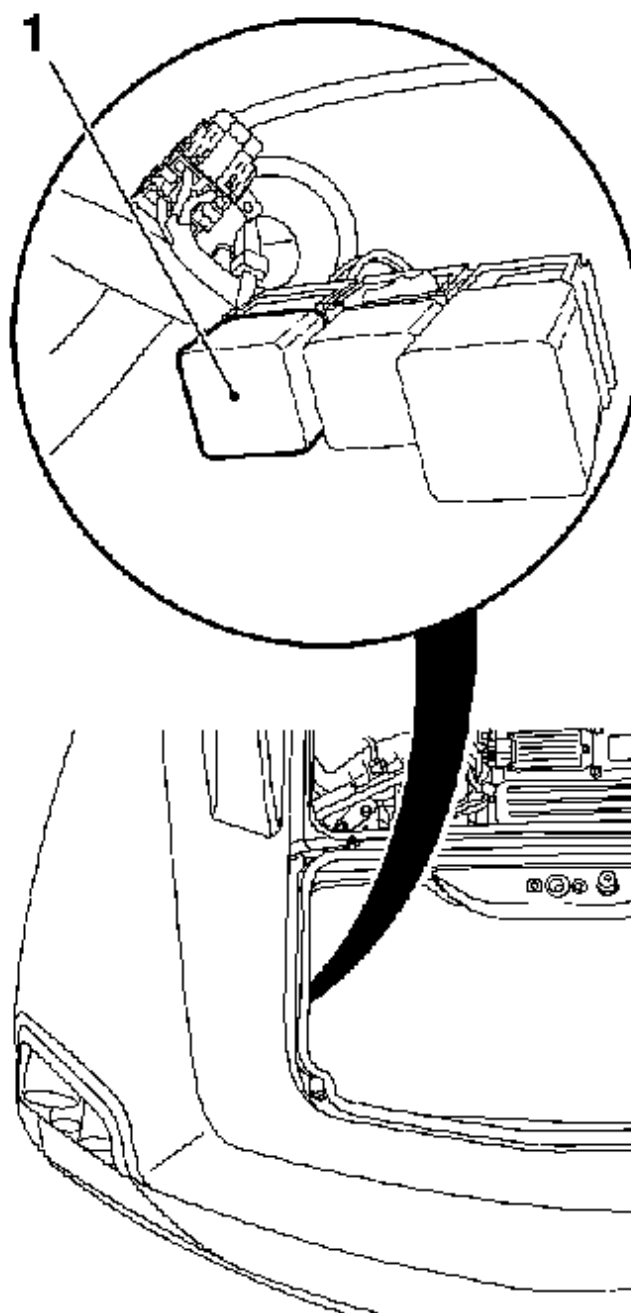

L0008813