


DIS Ignition Module Control Unit, Replace

1. Open the bonnet.
2. Disconnect the battery.
3. Open the rear engine cover.
4. Detach the ignition module control unit.
 - Release and detach the wiring harness connector.
 - 3 bolts (1)
5. Attach the ignition module control unit.
 - Coat the bolts with thread locking compound (red) and insert them.
 - 3 bolts
 - Tightening torque **8 Nm**
 - Attach and secure the wiring harness connector.
6. Close the rear engine cover.
7. Connect the battery.
8. Close the bonnet.
9. Reprogram the volatile memories.

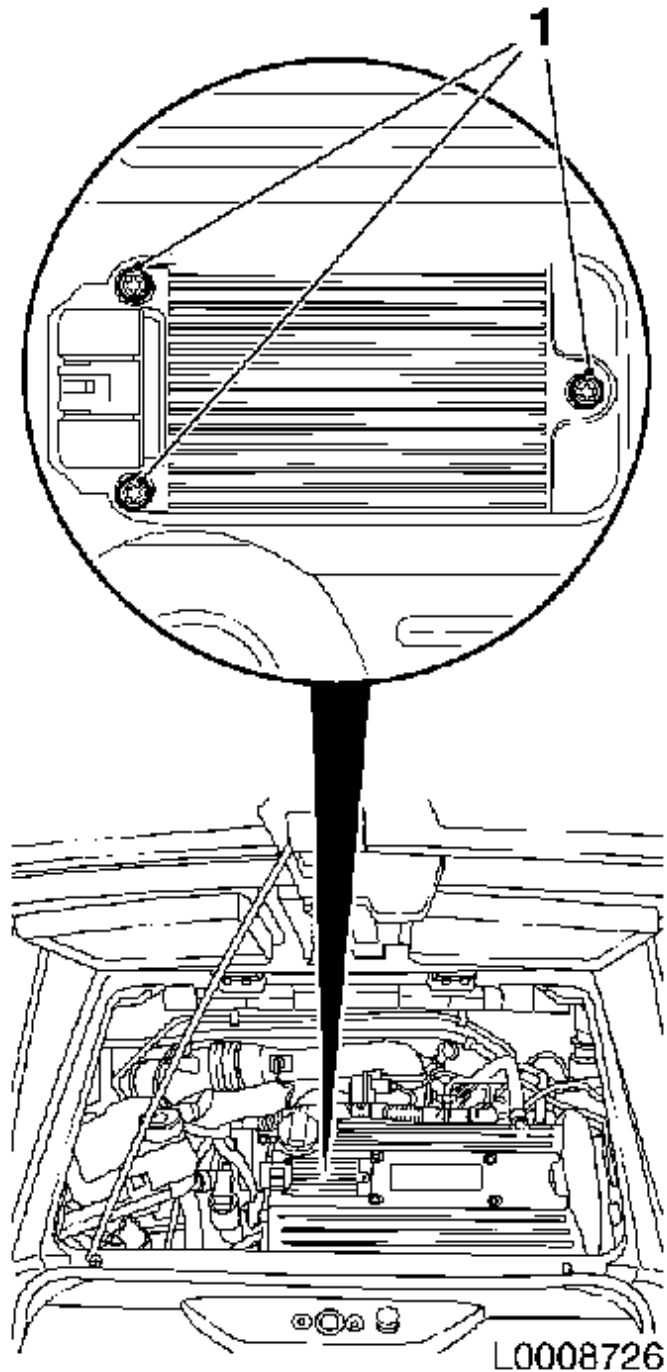

L0008726