


Pressure Relief Valve, Oil Cooler, Replace (Z22 SE)




Remove

Important: If securing ring for oil cooler adaptor, becomes loose while removing top cover, then counter-hold using Holding Wrench **KM-6416**.

1. Remove oil filter cover (1) from oil filter housing
 - Use **KM-6150**
2. Remove oil filter element from oil filter housing

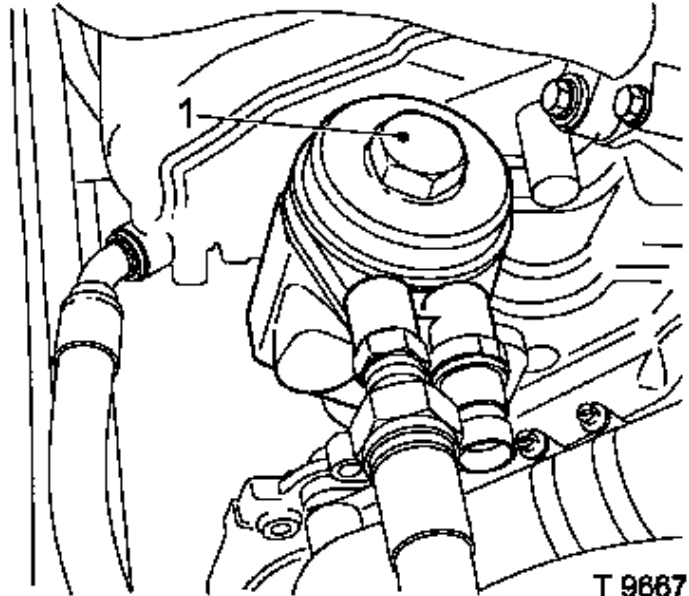

3. Remove pressure relief valve (1) from oil filter housing
 - Compress spring, then withdraw

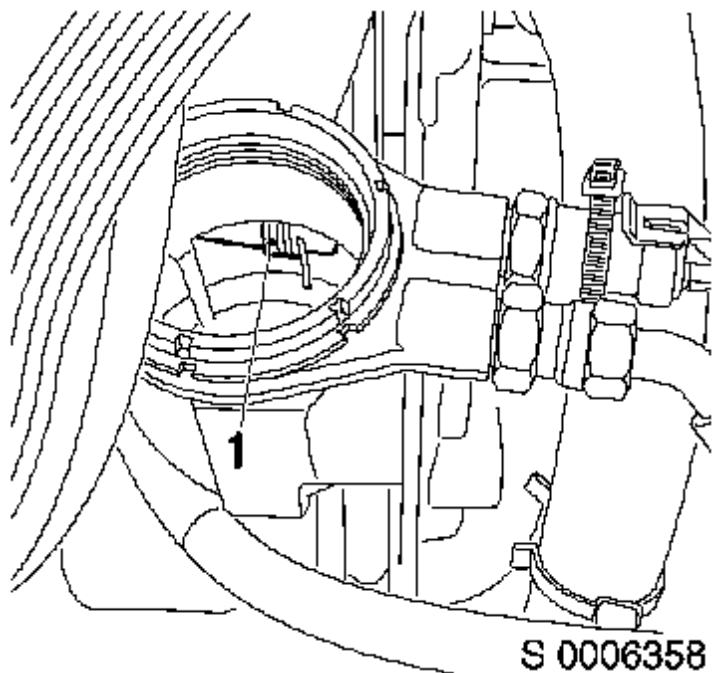

Install

4. Install pressure relief valve to oil filter housing
 - Insert valve seat into oil gallery, compress spring, then push valve bracket into position