


Upper Coolant Hose, Engine, Replace (Z 22 SE)



Remove

1. Drain coolant system – see operation “Coolant System, Drain, Fill and Bleed”
2. Lower vehicle
3. Release upper coolant hose from thermostat housing
 - Release, then remove clip
4. Raise vehicle
5. Remove fuel tank - see operation “Fuel Tank, Remove and Install”
6. Remove upper coolant hose (2) from coolant pipe
 - Release, then remove clip (1)

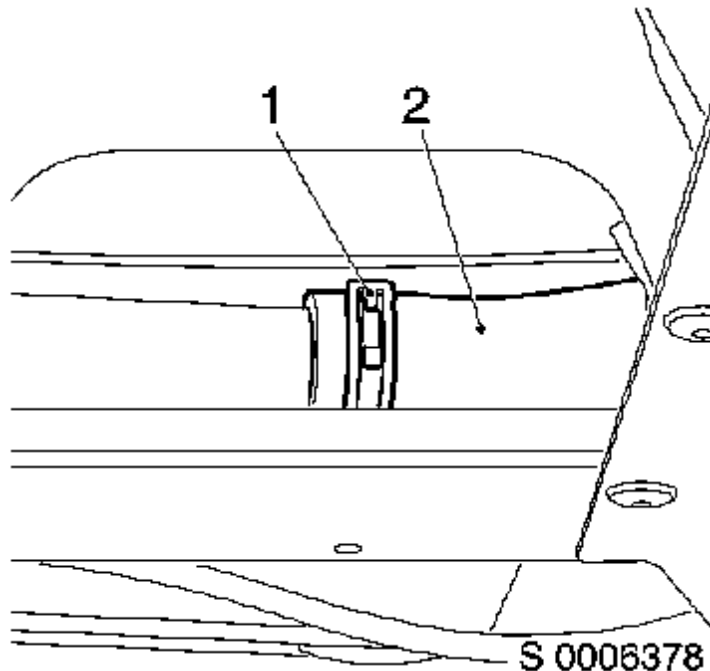

Install

7. Transfer 2x clip to new upper coolant hose
8. Install new upper coolant hose to coolant pipe
 - Install clip
9. Install fuel tank - see operation “Fuel Tank, Remove and Install”
10. Lower vehicle
11. Secure upper coolant hose to thermostat housing
 - Install clip
12. Fill cooling system - see operation “Cooling System, Drain, Fill and Bleed”