

Lower Coolant Hose, Engine, Replace (Z 22 SE)




Remove

1. Drain cooling system - see operation "Cooling System, Drain, Fill and Bleed"

Note: Includes releasing lower coolant hose from oil cooler.

- Release clip
 - Remove, then discard cable tie
2. Remove fuel tank - see operation "Fuel Tank, Remove and Install"
 3. Remove lower coolant hose (2) from coolant pipe
 - Release, then remove clip (1)

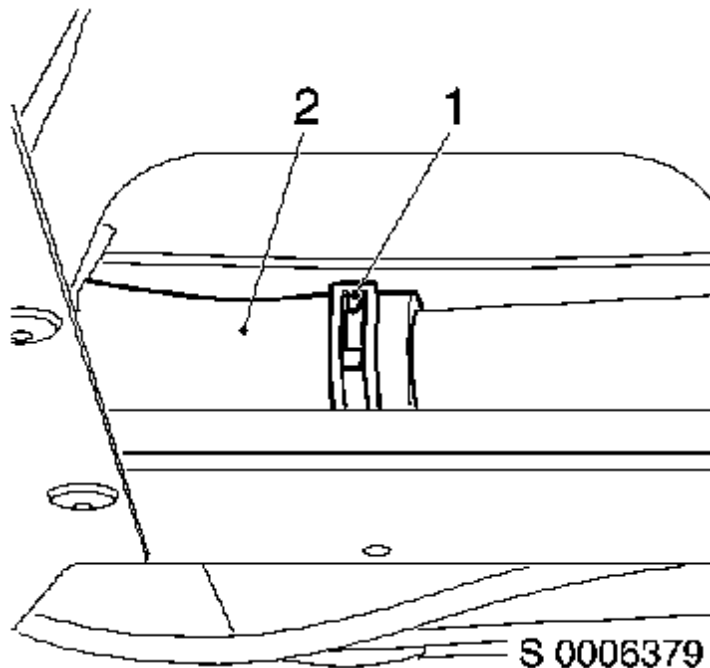

Install

4. Transfer 2x clip to new lower coolant hose
5. Install new lower coolant hose to coolant pipe
 - Install clip
6. Install fuel tank - see operation "Fuel Tank, Remove and Install"
7. Secure lower coolant hose to oil cooler
 - Secure clip
 - Install cable tie
8. Fill cooling system - see operation "Cooling System, Drain, Fill and Bleed"