


Steering Arm, Remove and Install



Remove, Disconnect

Tie rod from steering arm - nut; use suitable ball joint remover.

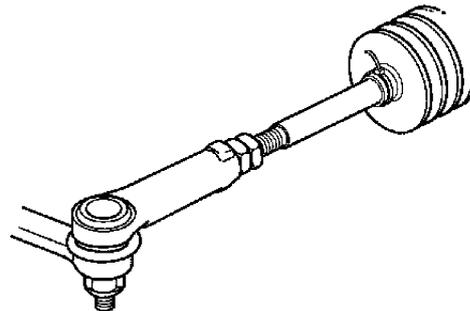


T 8994



Remove, Disconnect

Swivel joint from steering arm - nut; use suitable ball joint remover.

Steering arm from hub carrier - bolts; retain camber shims.

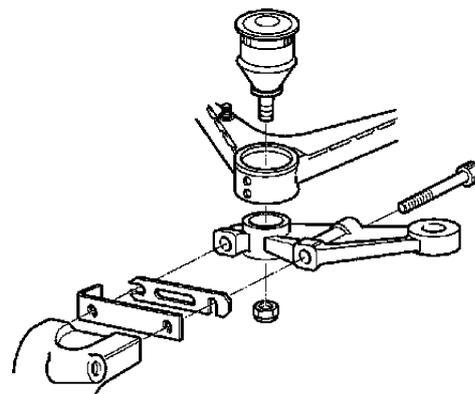


T8996



Install, Connect

Steering arm to hub carrier - shims, bolts 45 Nm.

Swivel joint to steering arm - nut 45 Nm.

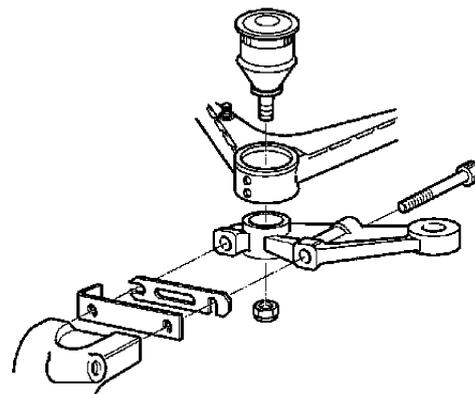


T8996



Install, Connect

Tie rod to steering arm - nut 30 Nm.

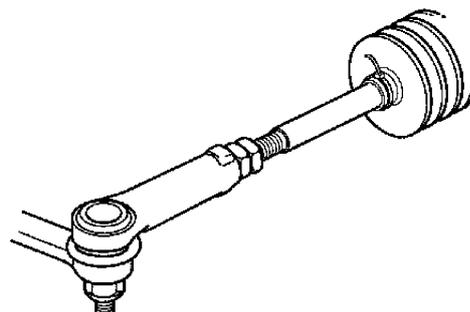

T 8994

