

Wheel Bearing Assembly, Remove and Install




Remove, Disconnect

Appropriate front wheel from vehicle.

Brake caliper from hub carrier - two bolts; move to one side and support.

Brake disc - one screw.

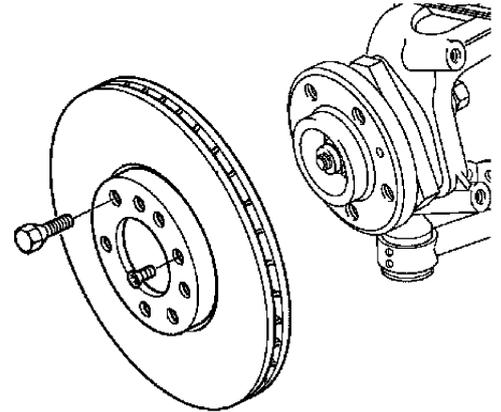

T 8999



Remove, Disconnect

Harness connector from wheel speed sensor (2).

Bolt (3), nut, thrust washers and dust shield from wheel bearing assembly.

Wheel bearing assembly from hub carrier - three bolts (1).



Install, Connect


Wheel bearing assembly to hub carrier - bolts.

Bolt, thrust washers and dust shield to wheel bearing assembly - 210 Nm.

Harness connector to wheel speed sensor.

Brake disc - one screw.

Brake caliper to hub carrier - two bolts.

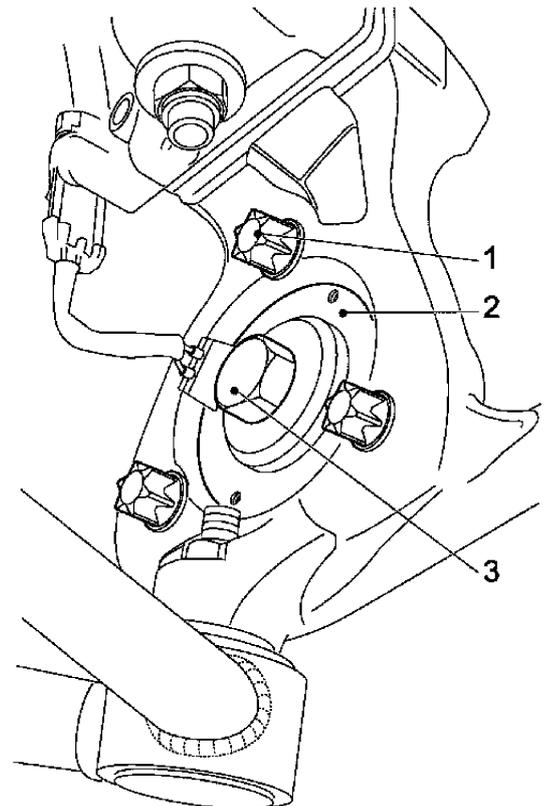

T 9334