

Bushings, Lower Wishbone, Replace




Remove

Lower wishbone from front suspension – see operation "Lower Wishbone, Remove and Install".



Disassemble

Bushings from lower wishbone – press out from outside.

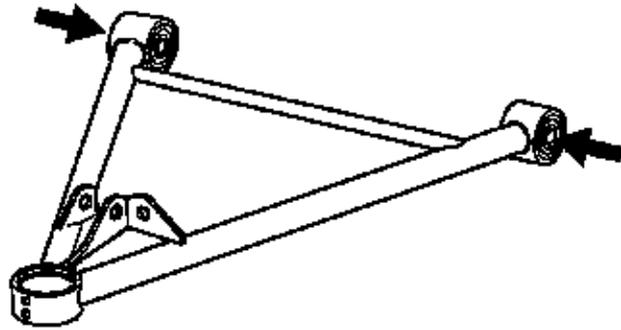

T 9345




Assemble

Bushings to lower wishbone – coat with IPC 'P-80' rubber lubricant, press from inside.



Install

Lower wishbone to front suspension.

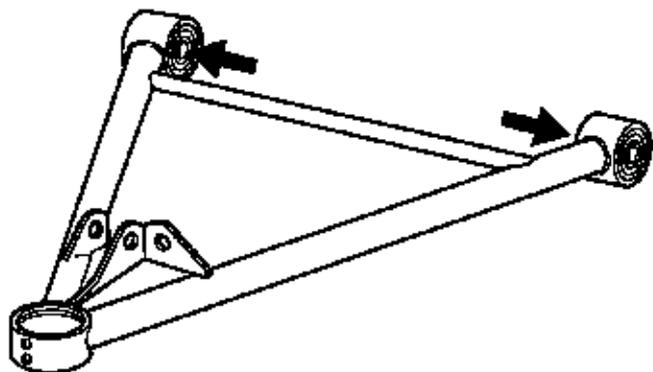

T 9346