

## Bushings, Upper Wishbone, Replace




Remove

Upper wishbone from front suspension – see operation "Upper Wishbone, Remove and Install".

Bushings from upper wishbone – press from inside.

**Important:** Front and rear bushings are different types.

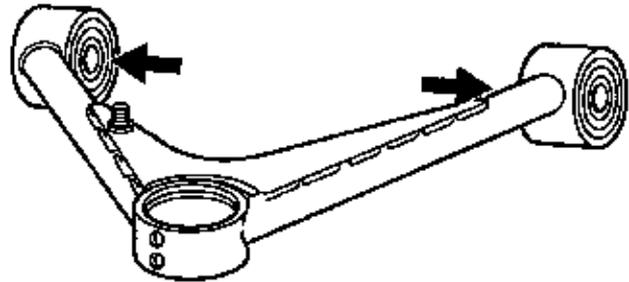


T 9350



Install

Bushings to upper wishbone – coat with IPC 'P-80' rubber lubricant, press from outside.

Lower wishbone to front suspension.

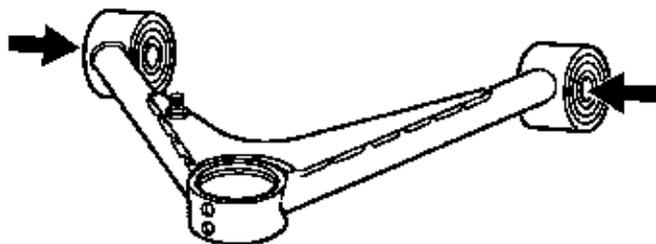

T 9351