


Road Wheel, Remove and Install



Remove

1. Chock road wheels
2. Remove security bolt from road wheel
 - Use special socket located under front bonnet

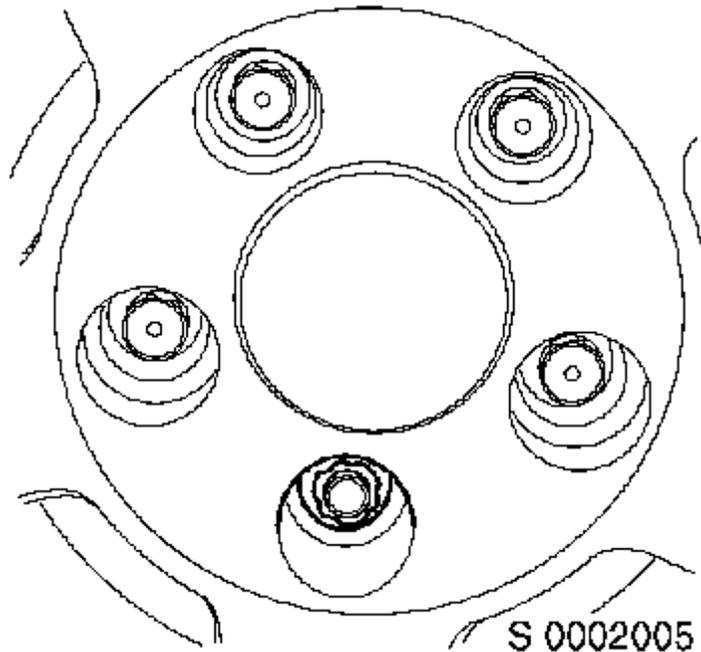

3. Raise and support vehicle
4. Remove road wheel from vehicle
 - Remove 4x wheel bolt



Install

5. Install road wheel to vehicle
 - Install 4x wheel bolt **90 Nm**
6. Raise vehicle and remove support
7. Lower vehicle
8. Install security bolt **90 Nm** to road wheel
 - Install special socket to holder
9. Remove chocks from road wheels