


## Fuel Pump and Fuel Lines

An electrical fuel pump is mounted in the fuel tank and a fuel filter is mounted in the fuel line.

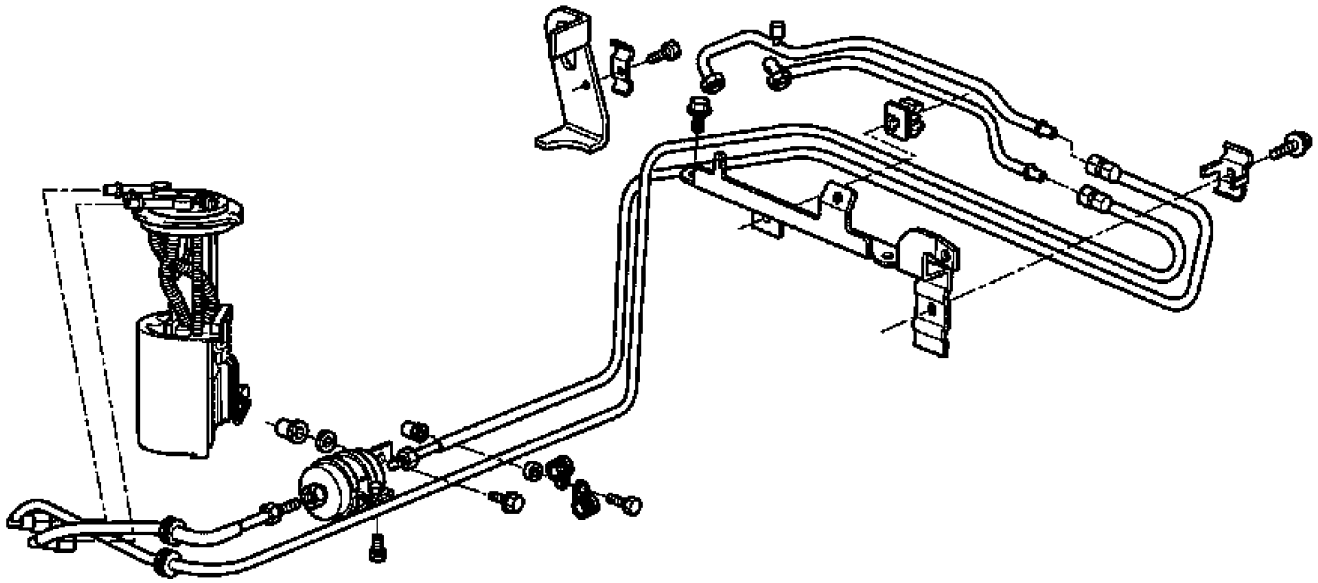

T 9166

- Service

A covered aperture is provided in the passenger compartment to gain access to the harness connectors and fuel lines at the top of the fuel pump.