


Fuel Cutoff Impact Switch

A fuel cutoff impact switch (1) is installed to cutoff the fuel supply in the event of an impact of sufficient severity to operate the switch.

The switch is located in the engine compartment and is used to break the electrical supply to the fuel pump relay.

The switch is reset by pressing the top of the switch to restore the electrical supply to the fuel system.

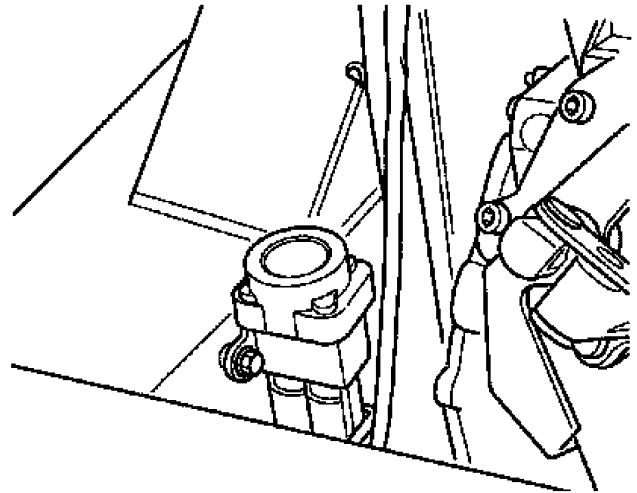

T 8959