

## Fuel Pump, Replace



**Remove**

Fuel tank from vehicle – see operation "Fuel Tank, Remove and Install".



Fuel pump from fuel tank – locking ring.



**Install**

Fuel pump to fuel tank – locking ring.

Fuel tank to vehicle – see operation "Fuel Tank, Remove and Install".

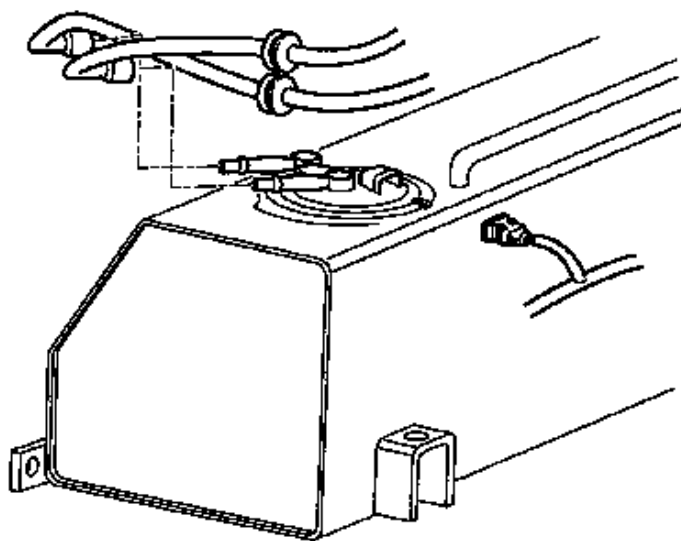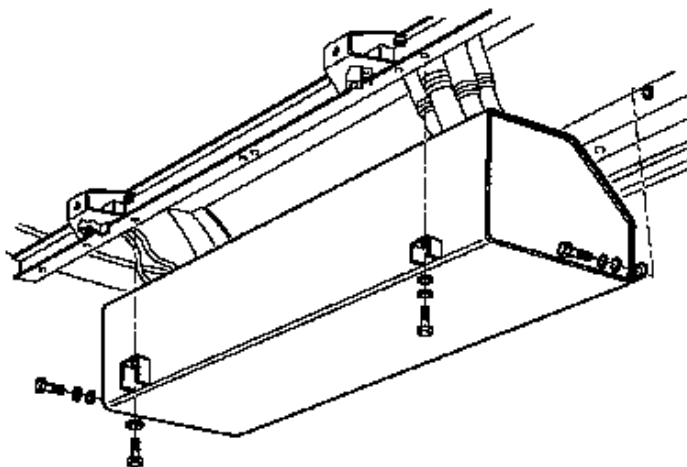

**S 1037**