

Control Knobs, Replace




Remove

Control knob (1, 2 or 3) from control unit – pull off.



Install

Control knob (1, 2 or 3) to control unit – push on.

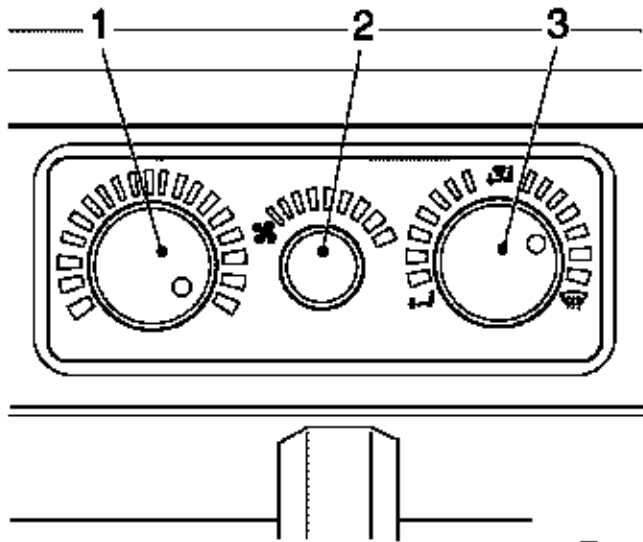

T 9580