

## Series Resistor, Fan Motor, Replace (Z22 SE)



**Remove**

Harness connectors from series resistor (1).

Series resistor from retaining clip.



**Install**

Series resistor to retaining clip.

Harness connectors to series resistor.

