


Bowden Cable, Air Distribution Housing, Replace




Remove

1. Remove hard top or soft top
2. Disconnect battery negative lead
 - Release windscreen wash reservoir, then move to one side
 - Release nut, bolt
3. Remove instrument pad assembly – see operation "Instrument Pad Assembly, Remove and Install"
4. Remove wiper motor cover (1)
 - Remove 2x screw (2)

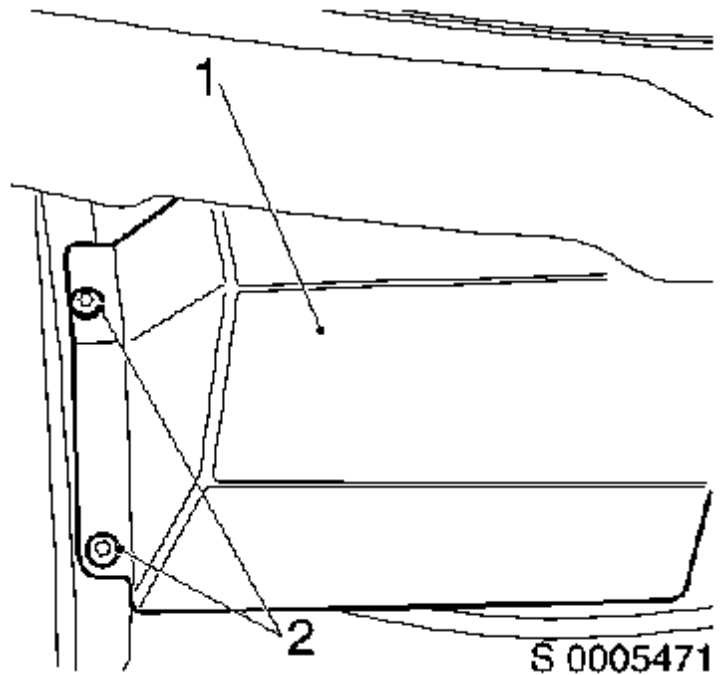


5. Release harness connector (1) from wiper motor

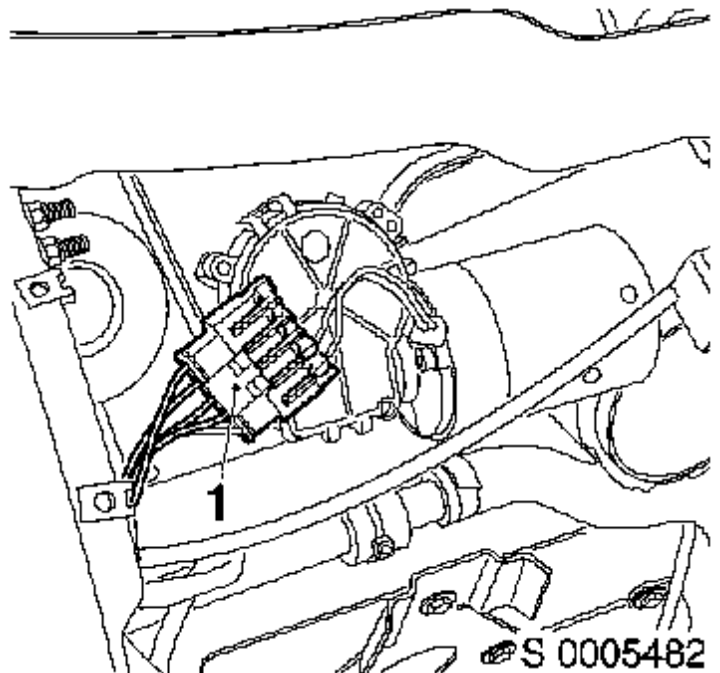

6. Disconnect bowden cable (1) from lever on


air distribution housing

- Prise off clip (2)

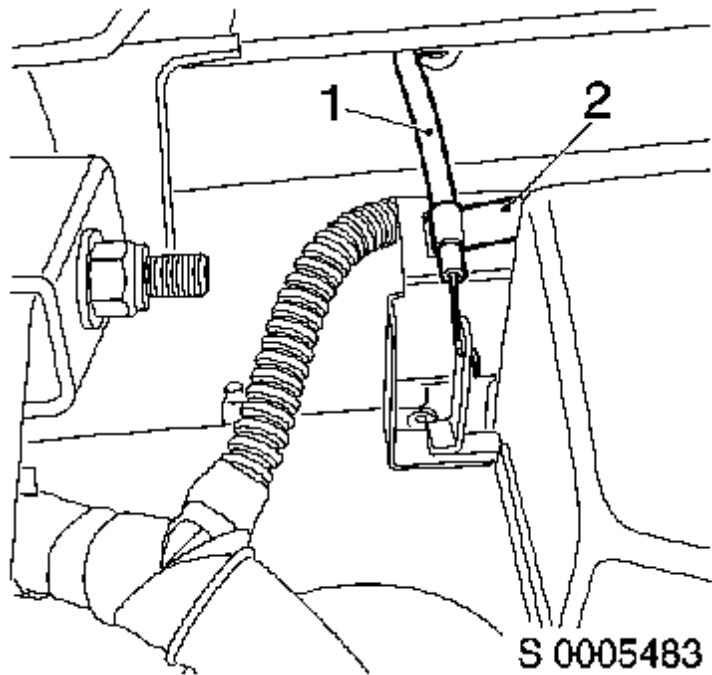

7. Remove bowden cable (1)

- Release screw (3)
- Pull off from air direction control (4)
- Release grommet (2)

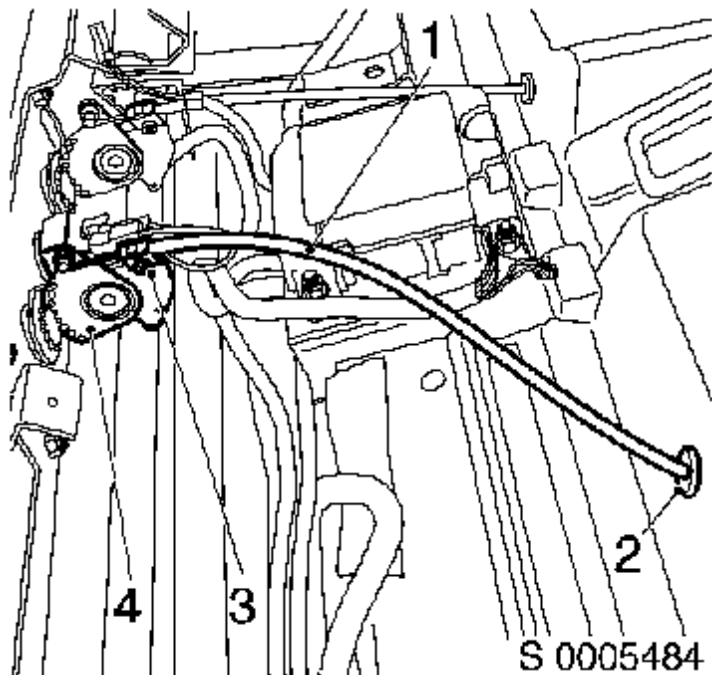

Install

8. Transfer grommet to new bowden cable

9. Install new bowden cable

- Secure grommet
- Push on to air direction control
- Secure screw

10. Adjust bowden cable

- Connect inner bowden cable to lever on air distribution housing
- Turn knob for air direction control fully clockwise (air flow directed to windscreen)

- Ensure lever on air distribution housing is in fully downward position (flap allowing air flow to footwell is in fully closed position)
 - Secure outer bowden cable in position
 - Push on clip
 - Check operation
11. Secure harness connector to wiper motor
 12. Install wiper motor cover
 - Install 2x screw
 13. Install instrument pad assembly – see operation "Instrument Pad Assembly, Remove and Install"
 14. Connect battery negative lead
 - Secure nut, bolt
 15. Install windscreen wash reservoir
 - Push fit
 16. Program all volatile memories
 17. Install hard top or soft top