


## Bowden Cable, Heater, Replace




### Remove

1. Remove hard top or soft top
2. Disconnect battery negative lead
  - Release windscreen wash reservoir, then move to one side
  - Release nut, bolt
3. Remove air intake pipe (1) from heater assembly and air distribution housing
  - Pull off

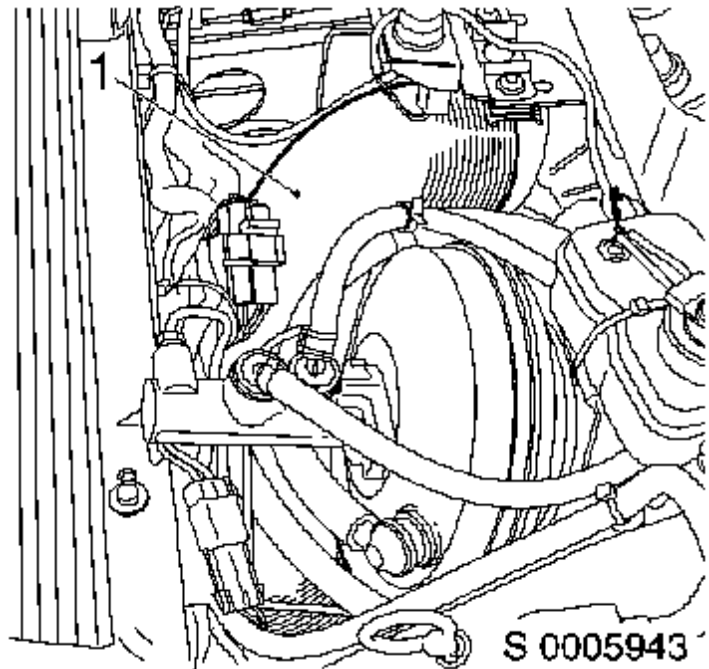


4. Disconnect bowden cable (1) from lever on heater assembly
  - Prise off clip (2)

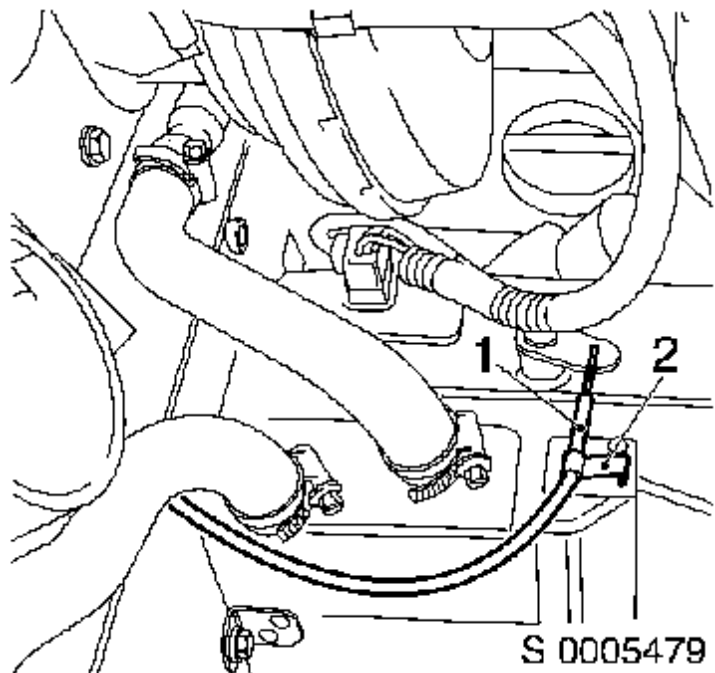


5. Release bowden cable from bulkhead
  - Remove clip (1)

- Remove screw (2)

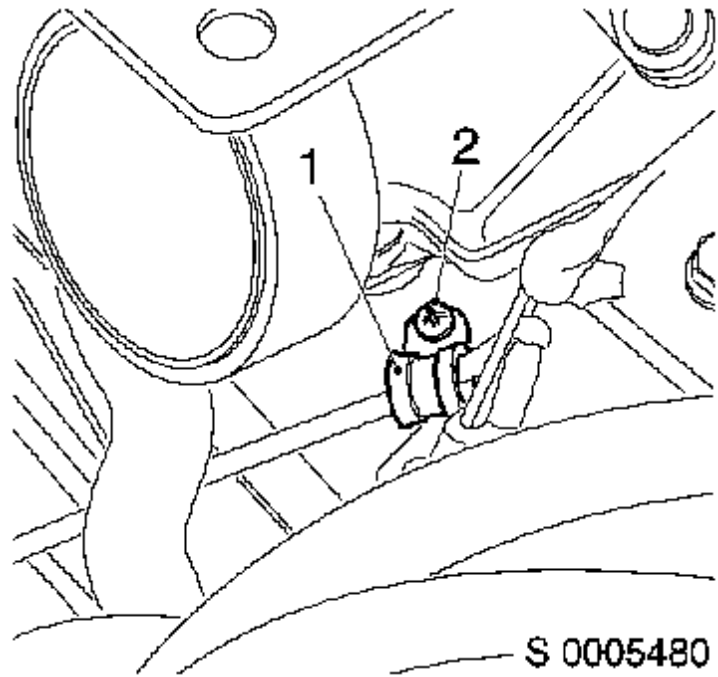

6. Remove instrument pad assembly – see operation "Instrument Pad Assembly, Remove and Install"

7. Remove bowden cable (1)
  - Remove cable tie (2), then discard
  - Release screw (4)
  - Pull off from air temperature control (5)
  - Release grommet (3)

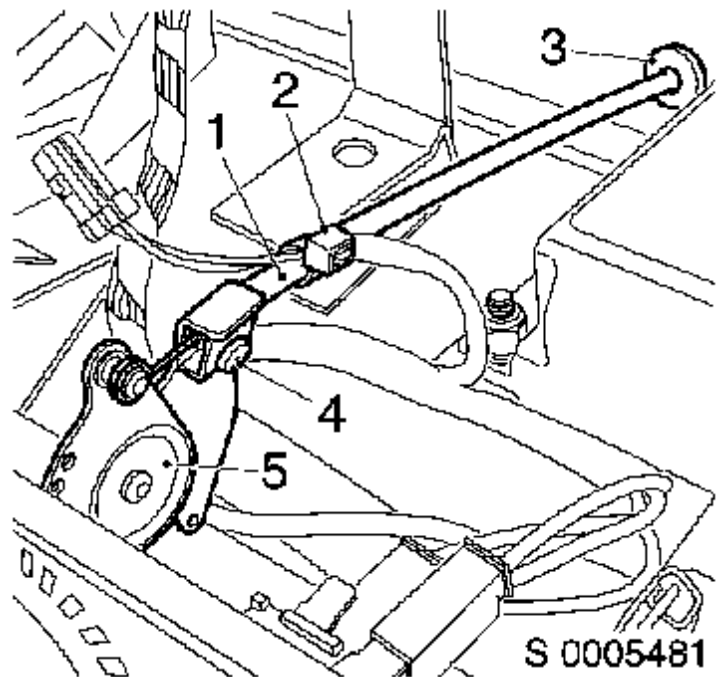

8. Transfer grommet to new bowden cable
9. Install bowden cable
  - Secure grommet
  - Push on to air temperature control
  - Secure screw
  - Install new cable tie
10. Adjust bowden cable

- Connect inner bowden cable to lever on heater assembly
  - Turn knob for air temperature control fully anti-clockwise (cold air position)
  - Ensure lever on heater assembly in fully closed position
  - Secure outer bowden cable in position
    - Push on clip
  - Check operation
11. Install instrument pad assembly – see operation "Instrument Pad Assembly, Remove and Install"
  12. Secure bowden cable to bulkhead
    - Install clip
      - Install screw
  13. Install air intake pipe to heater assembly and air distribution housing
    - Push on
  14. Connect battery negative lead
    - Secure nut, bolt
  15. Install windscreen wash reservoir
    - Push fit
  16. Program all volatile memories
  17. Install hard top or soft top