


## Air Distribution Housing, Replace

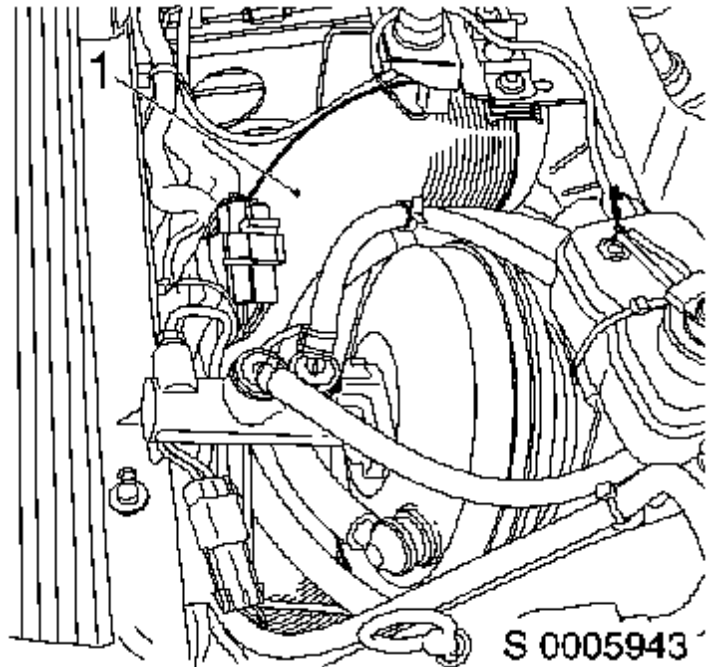


### Remove

1. Release windscreen wash reservoir from support bracket
  - Pull off, then move to one side
2. Remove air intake pipe (1) from heater assembly and air distribution housing
  - Pull off





3. Remove wiper motor cover (1)
  - Remove 2x screw (2)

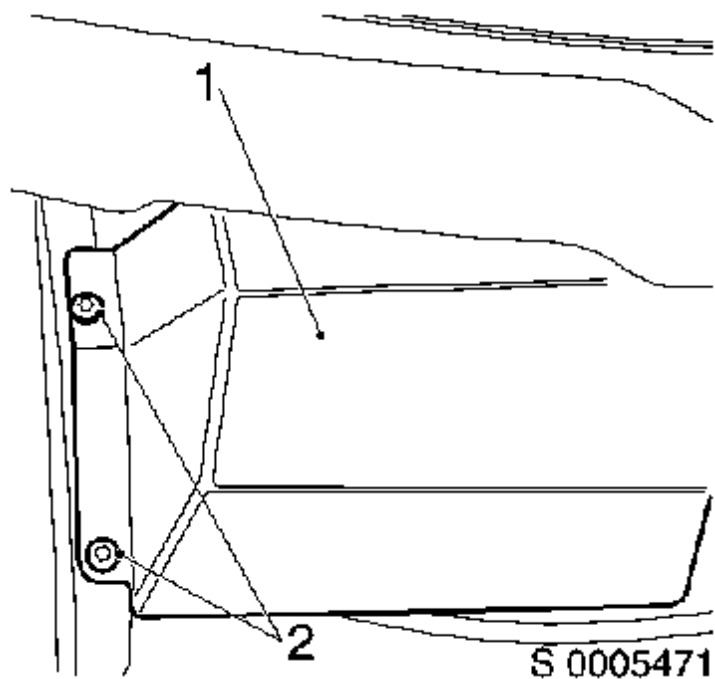


4. Remove wiper motor from support bracket
  - Release connector (1) from wiper motor
  - Release linkage from wiper motor
  - Note:** Note position of linkage.

- Remove nut (2)
- Remove 3x bolt (3)

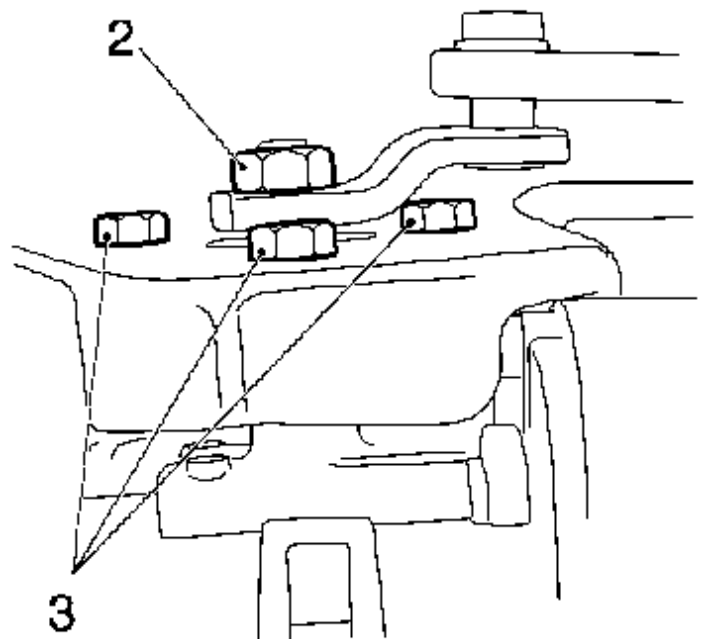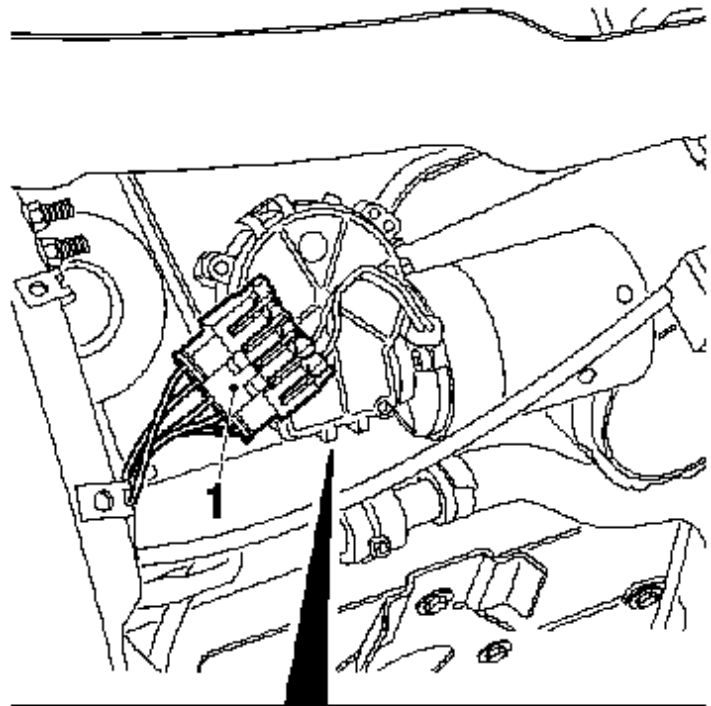


S 0005472


5. Remove wiper arm from linkage
- Note:** Note position of wiper arm.
- Pull up cover (1)
  - Remove nut (2)

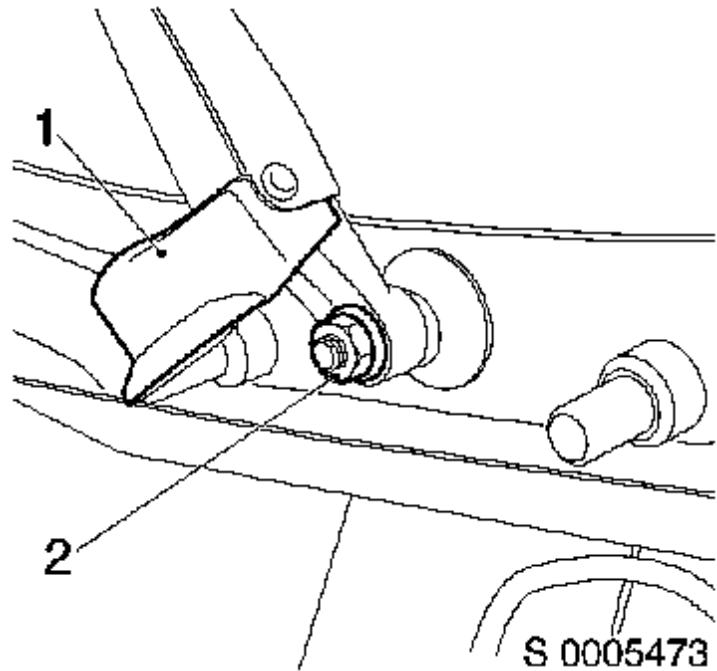


6. Remove support bracket for bonnet catch and anti-theft switch (1)
- Remove 2x bolt (2), 4x washer, bracket, then move bonnet catch (3) to one side
    - Apply match marks (4)
  - Disconnect harness from anti-theft switch (5)

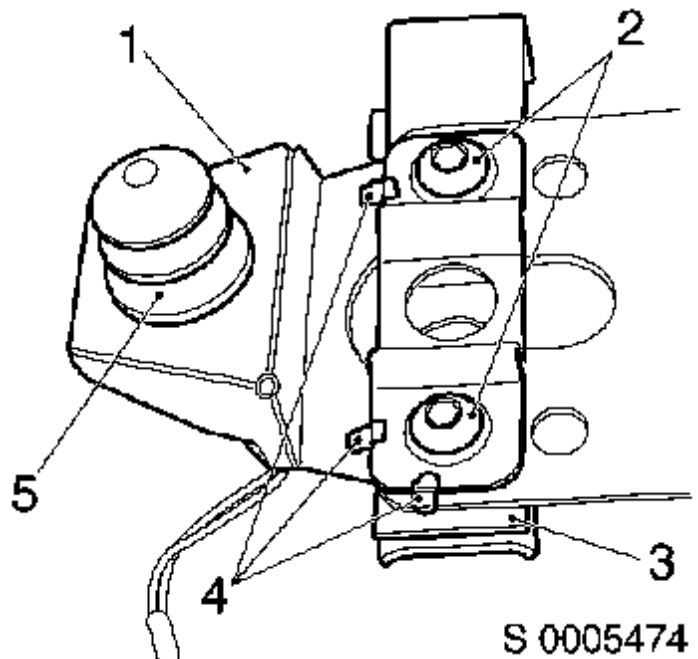


7. Release windscreen washer pipe from support bracket then move to one side
- Release pipe (2) from T piece (3)
    - Pull off
  - Release clip (1) from support bracket
    - Pull off

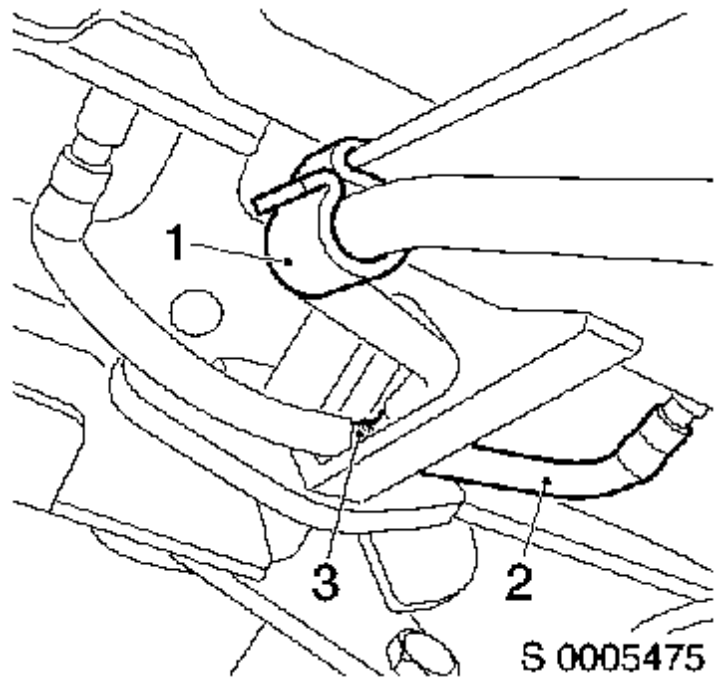

8. Remove support bracket (1) and wiper linkage from bulkhead
- Remove 3x bolt, grommet


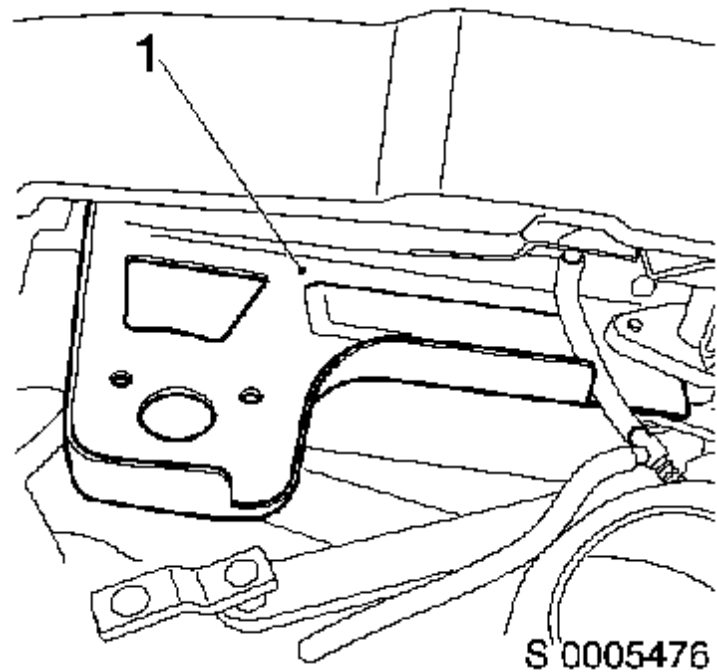


9. Disconnect bowden cable (1) from lever on air distribution housing
- Apply match mark (2)
  - Prise off clip (3)

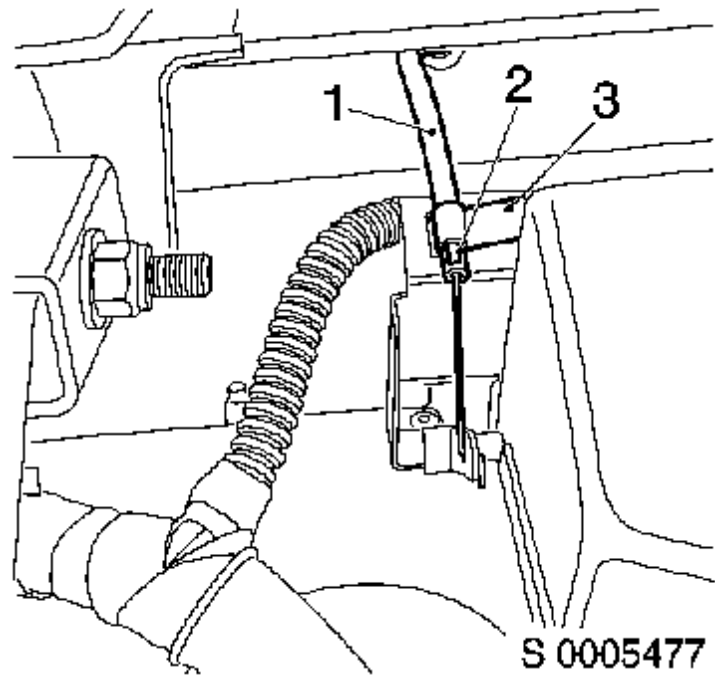

**10.** Remove air distribution housing from bulkhead

- Remove screw (1)
- Remove clip (2)  
**Note:** Clip (2) located inside vehicle under lower instrument panel.

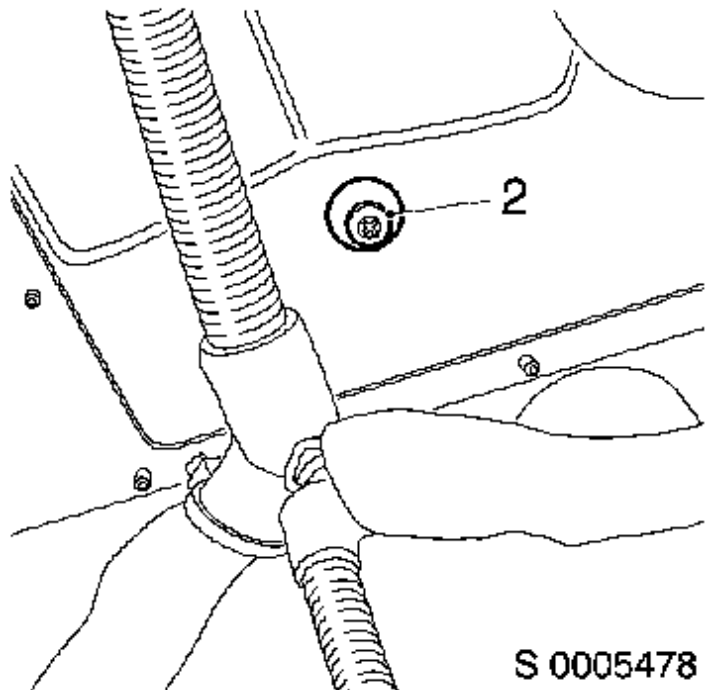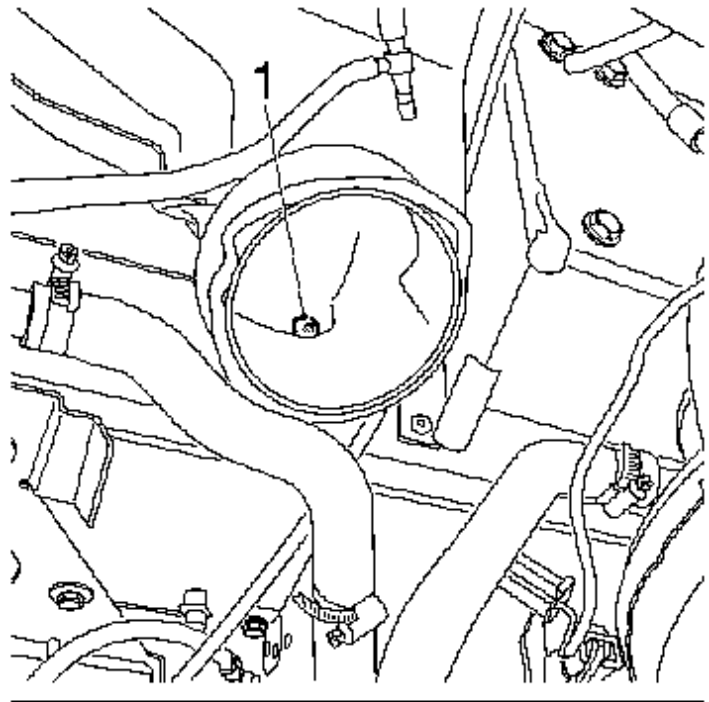**Install**

11. Install new air distribution housing to bulkhead
  - Install clip
  - Install screw
12. Connect bowden cable to lever on air distribution housing
  - Align match mark
  - Push on clip
13. Install support bracket and wiper linkage to bulkhead
  - Install 3x bolt, grommet
14. Secure windscreen washer pipe to support bracket

- Secure clip to support bracket
    - Push on
  - Secure pipe to T piece
    - Push on
- 15.** Install support bracket for bonnet catch and anti-theft switch
- Install 2x bolt, 4x washer, bracket, bonnet catch
    - Align match marks
  - Connect harness to anti-theft switch
- 16.** Install wiper arm to linkage
- Install nut
  - Push on cover
- 17.** Install wiper motor to support bracket
- Install 3x bolt
    - Apply locking compound
  - Install linkage to wiper motor
    - Install nut
  - Secure connector to wiper motor
- 18.** Install wiper motor cover
- Install 2x screw
- 19.** Install air intake pipe to heater assembly and air distribution housing
- Push on
- 20.** Secure windscreen wash reservoir to support bracket
- Slide on