

Liner, Front Wheelarch, Remove and Install




Remove, Disconnect

Wheel - bolts.

For liner on right side only, remove from front compartment:

- tyre inflator aerosol - release from clips
- fuse box - 2 screws
- relay box - 2 screws.

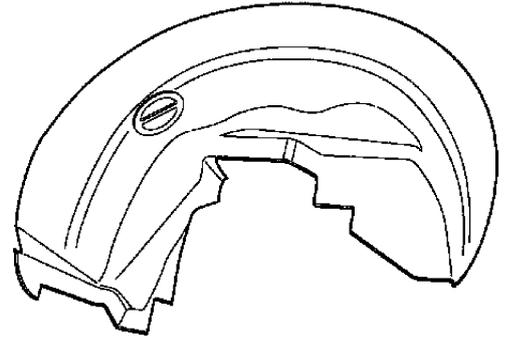

S 0917

Liner - 6 screws.



Install, Connect

Liner - 6 screws.

For liner on right side only, install to front compartment:

- relay box - 2 screws
- fuse box - 2 screws
- tyre inflator aerosol - engage in clips.

Wheel - bolts 90 Nm.