

Engine Cover, Remove and Install

Second technician will be required to remove and install engine cover.

Mark hinge positions on engine cover with a soft pencil.



Remove, Disconnect

Engine cover from hinges - 6 bolts.





Install, Connect

Engine cover to hinges - align markings, 6 bolts - 14 Nm.



Inspect

Engine cover gaps A, B and C.

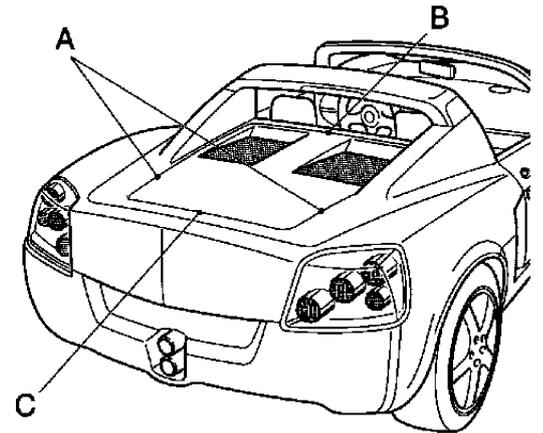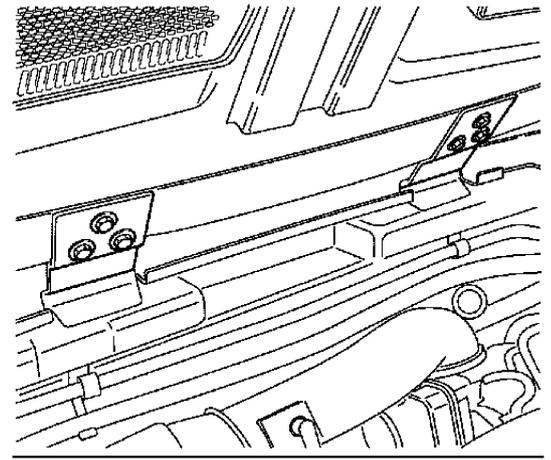

S 0779



Adjust


Gap if necessary.

Vertical misalignment with adjacent bodywork can be corrected at rear of engine cover by means of bump stops (1).



Important!

To avoid damage, do not allow engine cover to shut until engine cover lock has been checked and adjusted - see operation "Engine Cover Lock, Adjust".

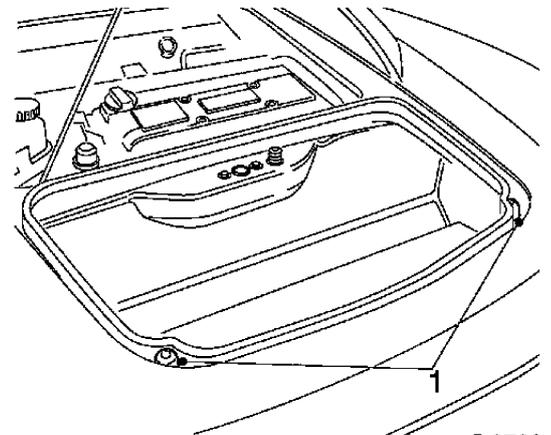

S 0780