

Engine Cover Lock, Adjust



Measure

Measurement of striker pin (x) for engine cover.
Measurement x = **58 ± 2.0 mm**





Adjust

Measurement of striker pin (x) for engine cover if necessary.

Striker pin must enter centre of latch hook (1).

Engine cover lock must be easy to open.

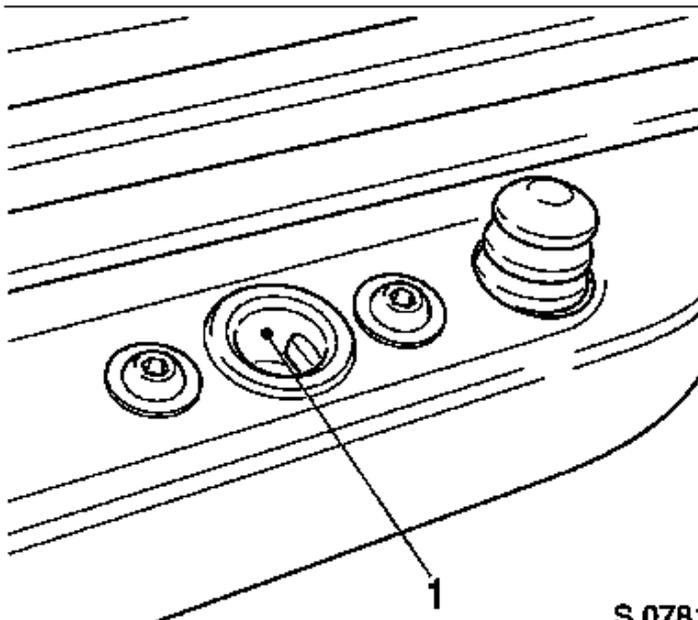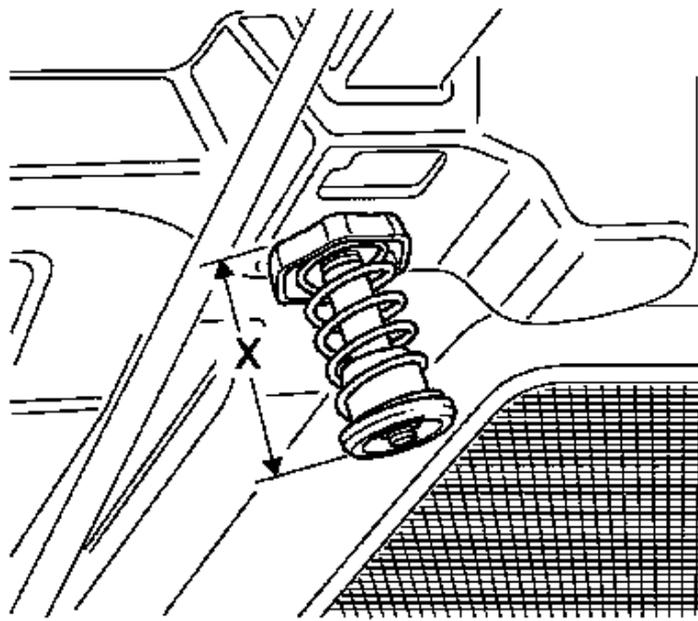

S 0781