

## Undertray, Remove and Install



### Important!

Follow vehicle lifting instructions given in Introduction.




With undertray installed, vehicle cannot be lifted by means of a two post hoist placed under chassis frame.

To remove undertray, vehicle should be lifted by means of a four post hoist or a workshop jack.

To remove undertray by means of a workshop jack, vehicle should be lifted on one side by placing a workshop jack at marked jacking points (arrowed).

Vehicle must be secured by fitting one safety stand (1) at front jacking point (arrowed) and a second safety stand at rear below rear lower wishbone (2).

- Secure vehicle to prevent vehicle rolling away.
- Only use authorised safety stands.
- Do not damage bottom of vehicle.
- Do not damage axle parts.

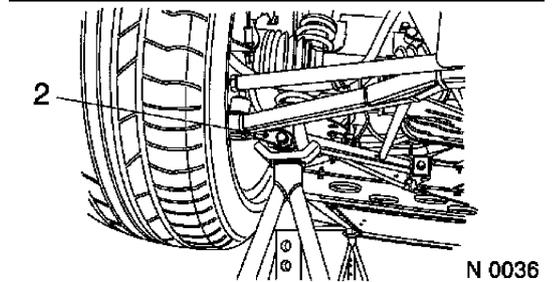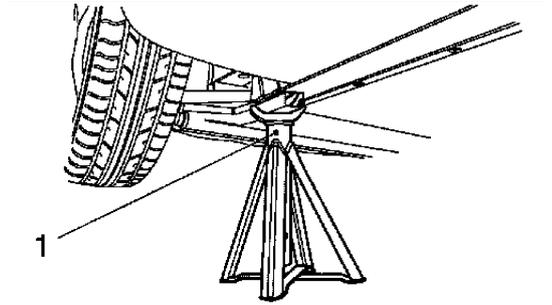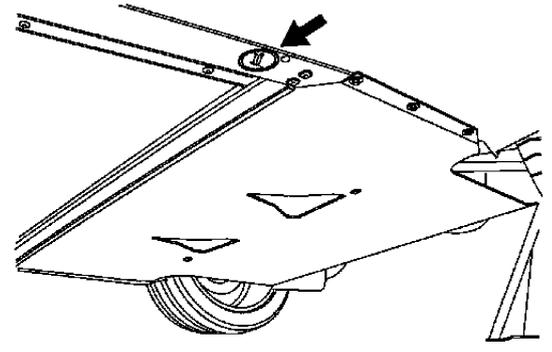

N 0036




### Remove, Disconnect

Undertray (1) - 13 bolts.



### Install, Connect

Undertray (1) - 13 bolts.

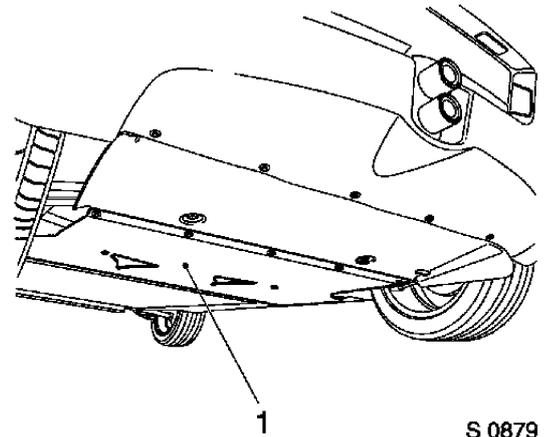

S 0879