


Engine Cover, Remove and Install



Remove

1. Release and support engine cover
2. Detach engine cover
 - Remove 6 bolts (1)
Note: 2. Enlist the assistance of a second technician
Note: Mark on the alignment mark

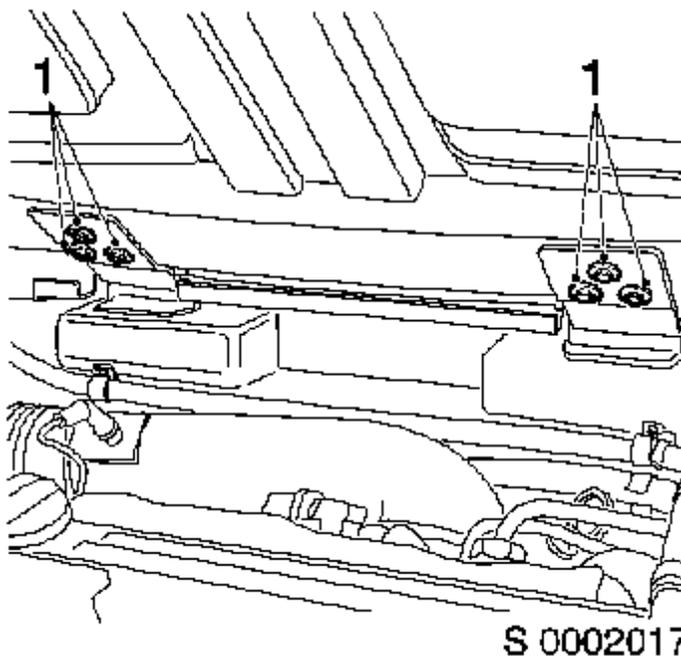

Install

3. Install engine cover
 - Fit 6 bolts
 - Align engine cover
Note: 2. Enlist the assistance of a second technician
4. Close engine cover.