


Undertray, Engine, Replace



Remove

Important: A four-post hoist must be used to raise the vehicle when removing the engine undertray. The vehicle can be moved to a two-post hoist for other operations if required.

1. Remove engine undertray (1)
 - Remove 13x bolt, 13x washer

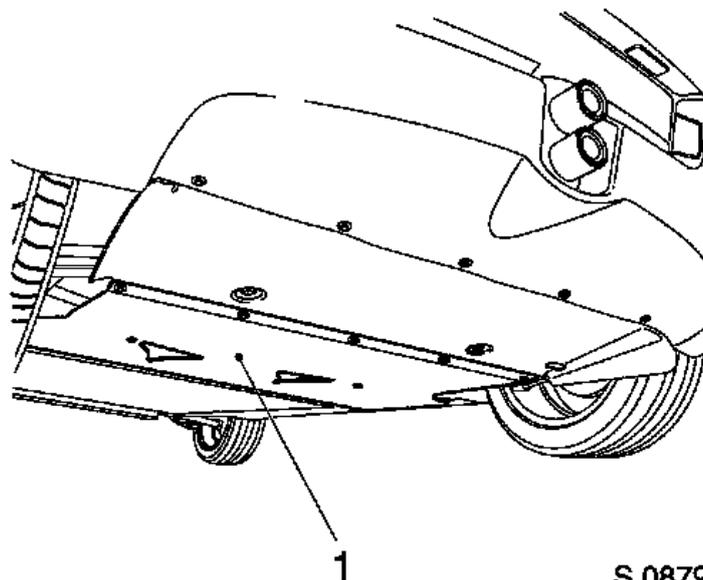

Install

2. Install engine undertray
 - Install, then secure 13x bolt, 13x washer