


## Hub Assembly, Rear Wheel

The wheel hub is supported in a bearing, which is mounted in the hub carrier and retained by means of three bolts. The wheel hub is equipped with splines to accept the drive shaft, which is retained on the wheel hub by means of a nut.

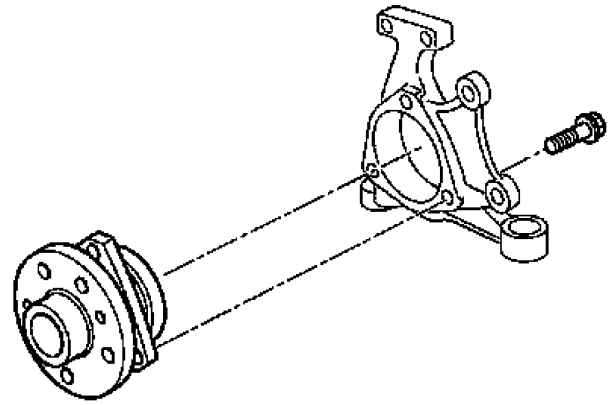

**T 8940**

- **Service**

The wheel bearing is maintenance-free and is not adjustable.