

Toe-in, Rear Wheels, Adjust



Measure

Rear wheel toe-in using optical alignment measuring equipment. For dimensions refer to "Technical Data"



Adjust


Toe-in if necessary:

Loosen locknuts (1) and (2) on both right and left tie rods. Always adjust both tie rods same amount to obtain setting. Tighten locknuts on both tie rods - **45 Nm**.



Measure

Toe-in setting, final check.

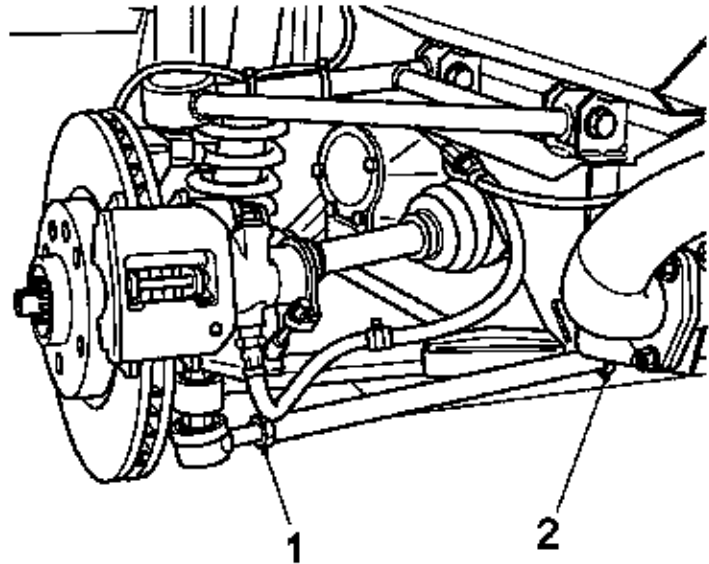

T 9354