

Wheel Bearing Assembly, Replace



Remove, Disconnect

Brake disc from wheel hub - see "Brake Disc, Remove and Install" in group H.

Nut (1) from drive shaft - split pin; apply parking brake.

Harness connector from wheel speed sensor.

Wheel bearing assembly from hub carrier and drive shaft - three bolts; use puller if necessary.




Install, Connect

Wheel bearing assembly to hub carrier and drive shaft - bolts.

Harness connector to wheel speed sensor.

Hub nut (1) to drive shaft - split pin; apply parking brake.

Brake disc to wheel hub - see "Brake Disc, Remove and Install" in group H .

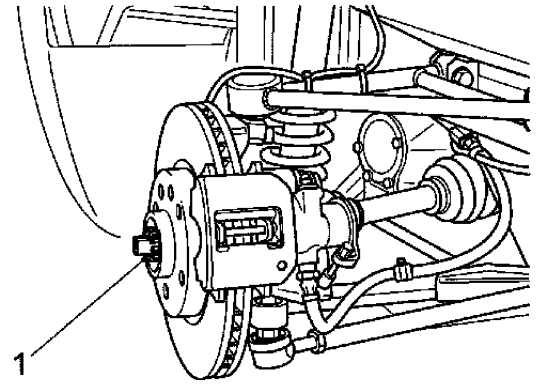

T 9591