

Suspension Spring, Remove and Install



Remove, Disconnect

Shock absorber from rear suspension - see operation "Shock Absorber, Remove and Install".



Disassemble

Suspension spring from shock absorber - use suitable compressor, release spring seat.




Assemble

Suspension spring to shock absorber - use suitable spring compressor, install spring seat.



Install, Connect

Shock absorber to rear suspension.

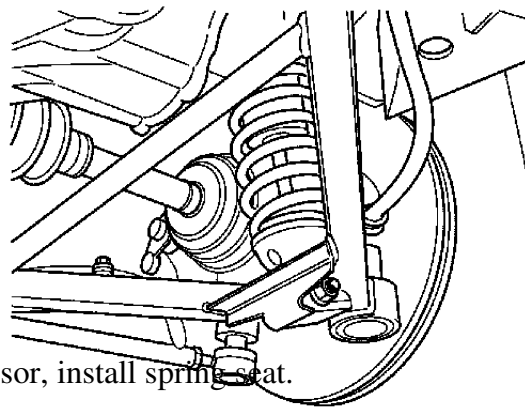

T 9659