


Bushings, Upper Wishbone, Replace



Remove

Upper wishbone from front suspension – see operation "Upper Wishbone, Remove and Install".

Bushings from upper wishbone – press out.

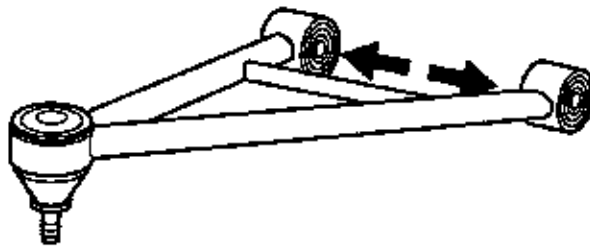


T9471



Install

Bushings to upper wishbone – coat with IPC 'P-80' rubber lubricant, press in.

Upper wishbone to front suspension.

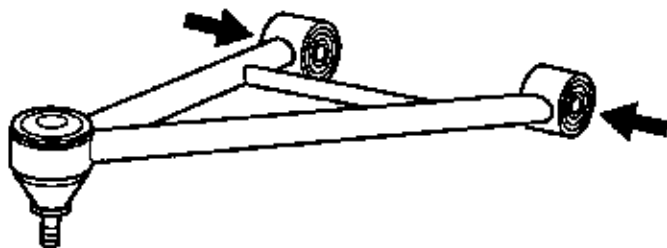

T9472