


Suspension Spring, Replace



Remove


1. Chock front road wheels
2. Raise and support vehicle
3. Remove rear road wheel
 - Remove 4x bolt, security bolt
 - Use special socket located under bonnet
4. Release shock absorber from chassis
 - Remove bolt, nut, washer

Note: Support rear suspension at lower wishbone

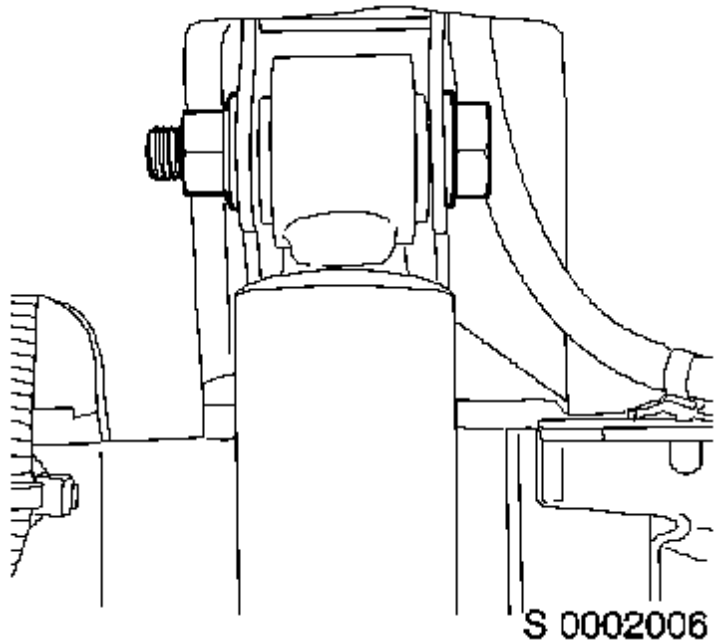

S 0002006


5. Release shock absorber from lower wishbone
 - Remove bolt, nut, washer

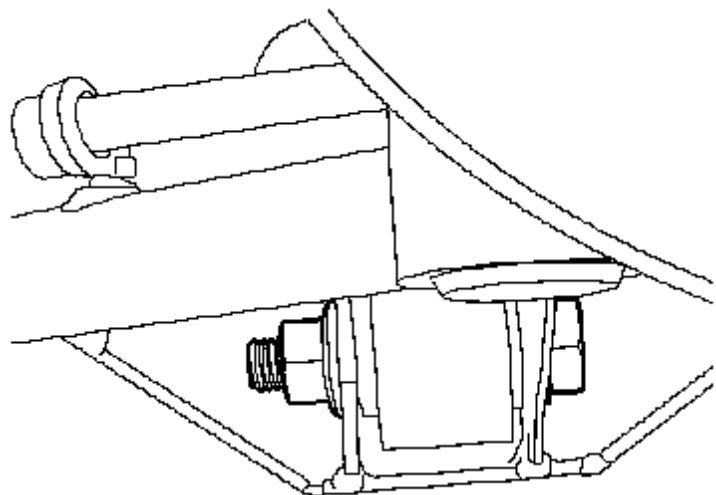

S 0002007


6. Remove shock absorber from vehicle

7. Remove spring from shock absorber
 - Use spring compressor

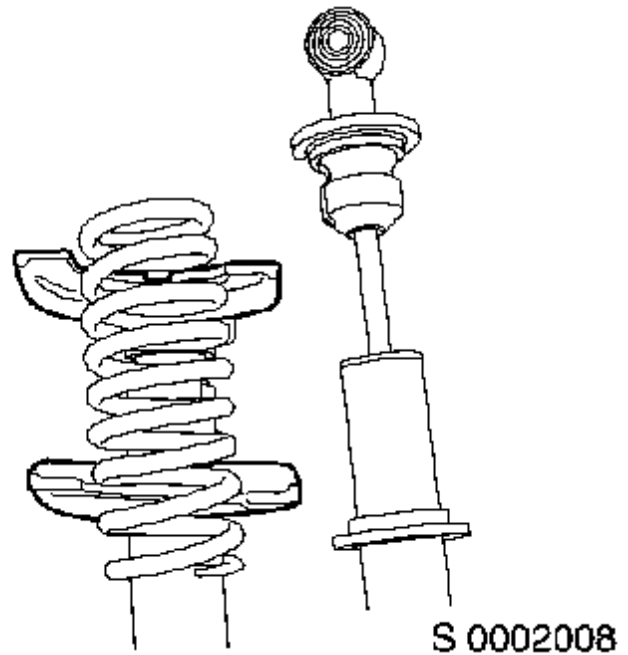

Install

8. Install spring to shock absorber
 - Use spring compressor

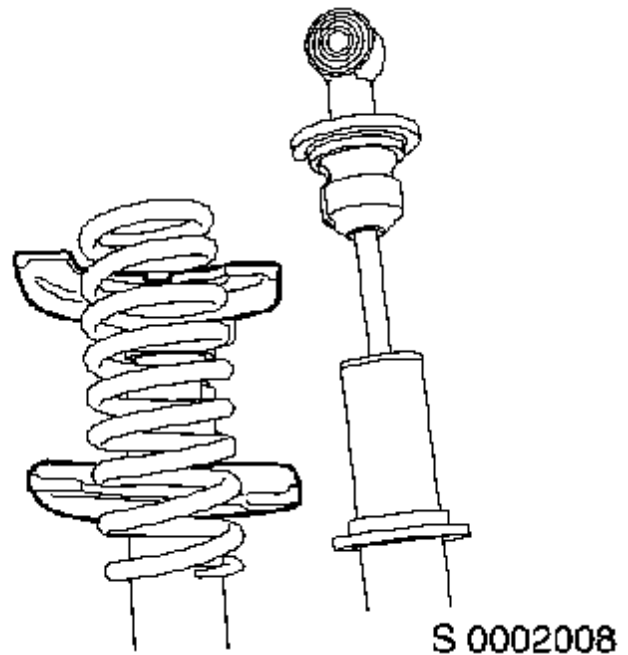

9. Install shock absorber to vehicle
10. Secure shock absorber to lower wishbone
 - Install bolt, washer, new nut **45 Nm**
11. Secure shock absorber to chassis
 - Install bolt, washer, new nut **45 Nm**
12. Remove support from lower wishbone
13. Install rear road wheel
 - Install 4x bolt, security bolt **90 Nm**

- 14.** Raise vehicle and remove support
- 15.** Lower vehicle
- 16.** Remove chocks from front road wheels