



Folding Cover, Drive Shaft, Wheel Side, Replace

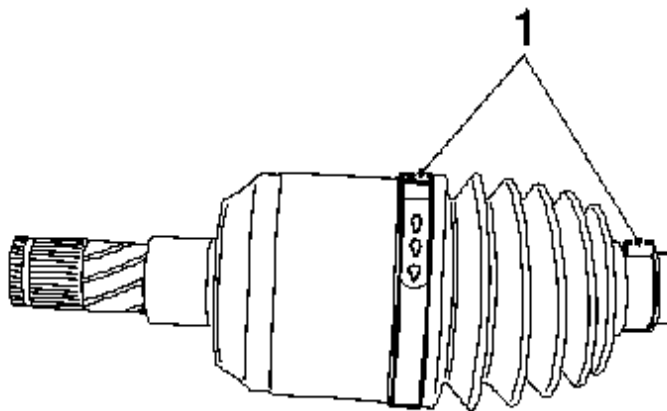


Remove

1. Remove relevant drive shaft from vehicle - see operation "Drive Shaft, Remove and Install"
2. Secure drive shaft in soft jaw vice
3. Using suitable tool, release 2x clip (1)
 - Remove, then discard 2x retaining clip (1) from folding cover
 - Slide folding cover along shaft

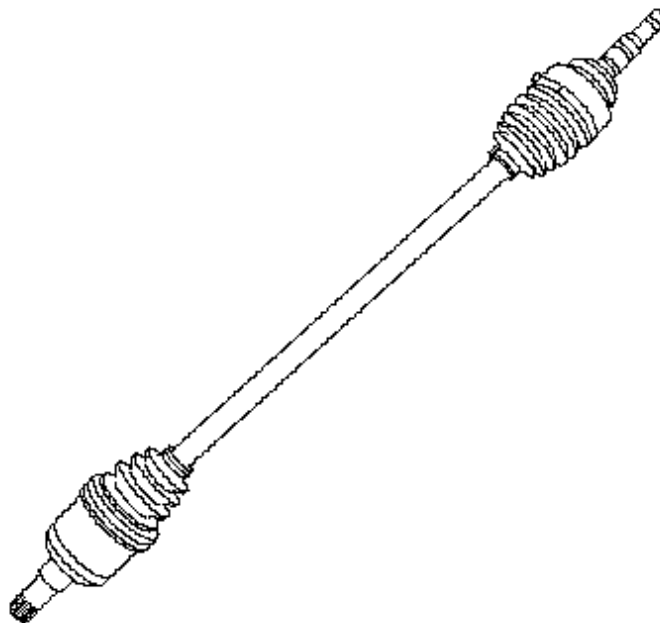

S 0006258

4. Remove constant velocity joint from drive shaft
 - Use soft head mallet to tap inner bearing race
 - Remove, then discard clip from drive shaft

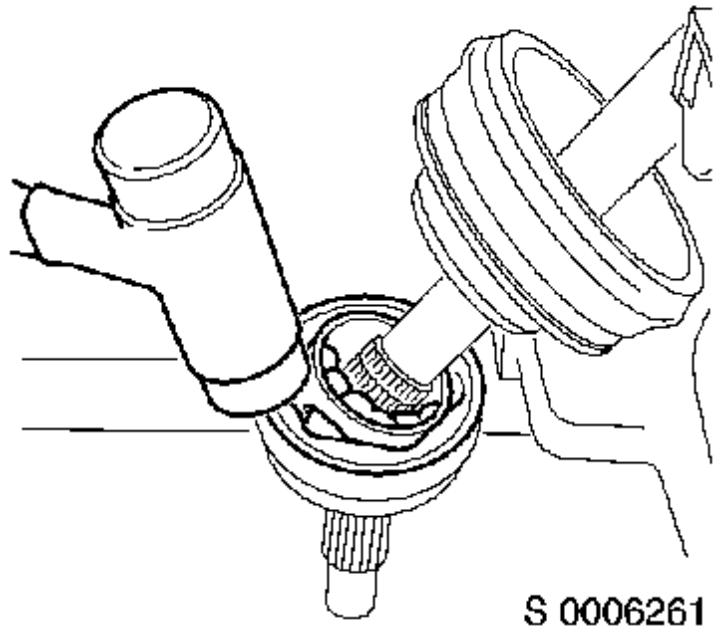

5. Remove, then discard folding cover from drive shaft
6. Clean all components

**Install**

7. Install new folding cover to drive shaft
 - Position new retaining clip for folding cover to drive shaft
- Important:** Use specified grease for constant velocity joint.
8. Install constant velocity joint to drive shaft
 - Install new retaining clip to drive shaft
9. Install folding cover to groove on drive shaft and groove on be constant velocity joint
 - Position 2x retaining clip to folding cover
 - Check positioning of folding cover and 2x retaining clip
 - Secure 2x retaining clip to folding cover
 - Use commercially available pliers
10. Install drive shaft to vehicle - see operation "Drive Shaft, Remove and Install"