



## Cylinder Head, Check for Plane Surface (Z22 SE)

1. Clean the sealing surfaces.
  - Remove any gasket residue.

**Important:** The cylinder head must not be skimmed.

2. Check for plane surface.
  - Check the cylinder head at the sealing surfaces for flexing (across and lengthways) and across the diagonals for distortion.
    - Use a straightedge, feeler gauges

**Note:** Height of the cylinder head (sealing surface to sealing surface): Dimension (I) – 129 mm

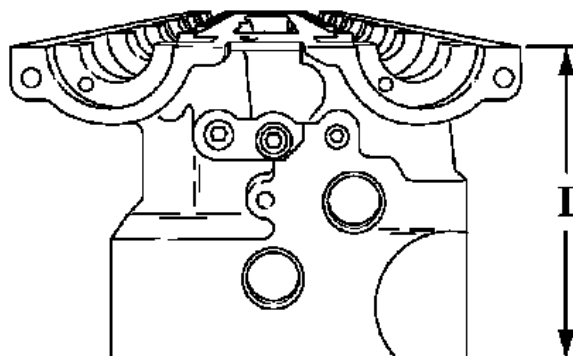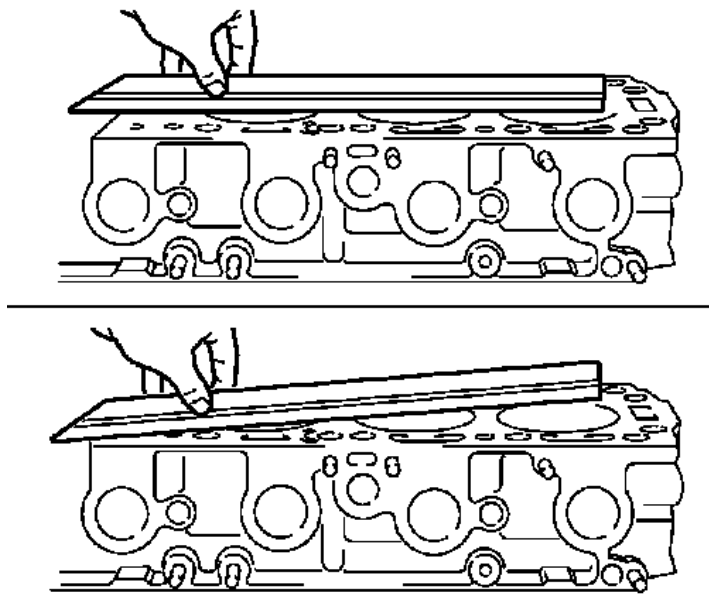

G 3658