

## Brake Lines, Replace

Fill brake fluid reservoir to MAX mark and seal with blind cap.


### Important:

Note type of original flaring and thread diameter of existing union bolts. Brake lines are usually supplied by the metre without union bolts and pipe flaring.



**Install**

Corresponding union bolt over brake line and form a flare at end of brake line – use suitable flaring tool.

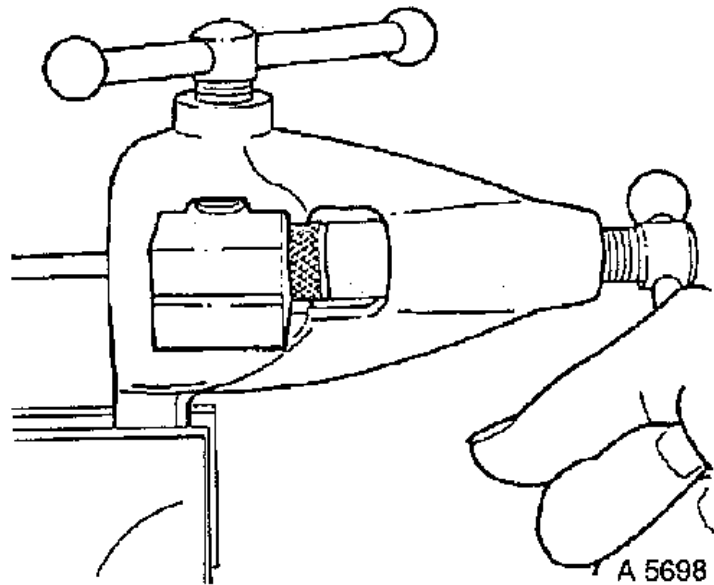

**Adjust**

Bend new brake line, using part to be replaced as a pattern – use pipe bender to avoid cross-sectional distortions.

### Important:

When replacing brake lines, ensure brake lines are not routed between wiring harnesses. Distance between wiring harnesses and brake lines should be at least **25 mm**.

