


## Undertray, Front, Remove and Install



Remove

1. Raise vehicle
2. Remove front undertray (1)
  - Remove 12x bolt, 9x washer

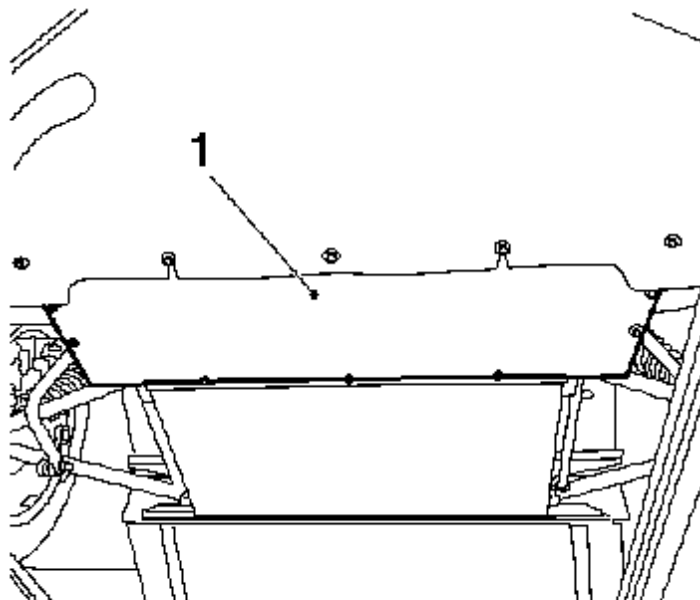


S 0005354



Install

3. Install front undertray (1)
  - Install 12x bolt, 9x washer

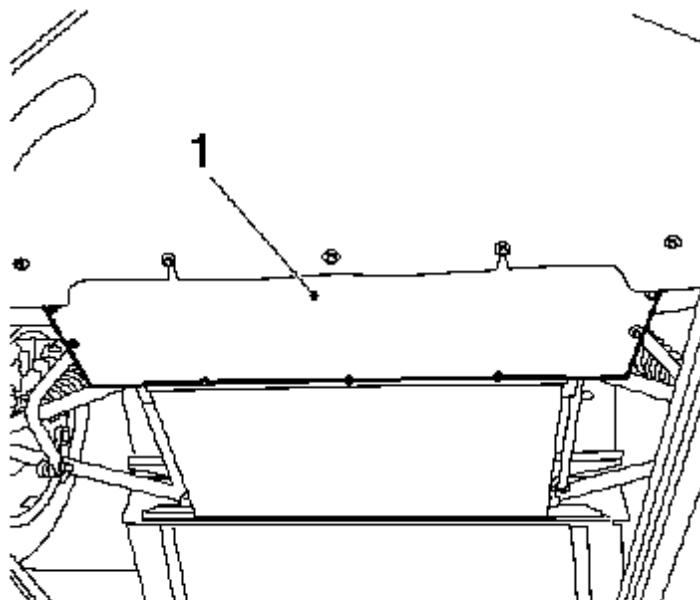

S 0005354

4. Lower vehicle