

## Turn Signal Switch, Remove and Install Screen Wiper Switch, Remove and Install




**Remove**

Driver's air bag from steering wheel – bolts.


Horn harness connector.

Steering wheel is shown removed for clarity.

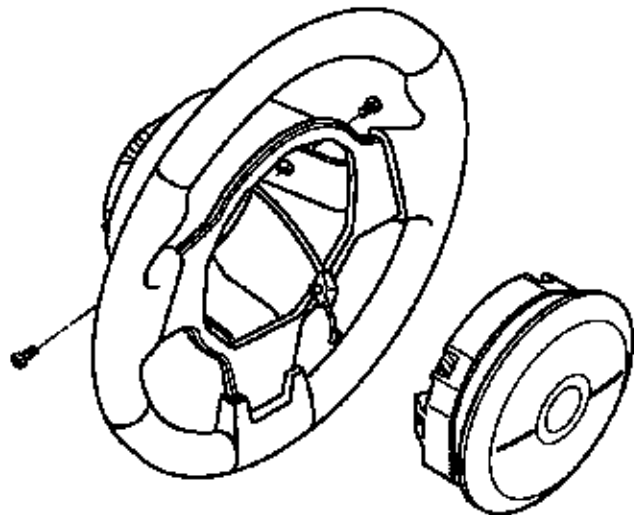

**T 9390**

Steering wheel from hub – four bolts.

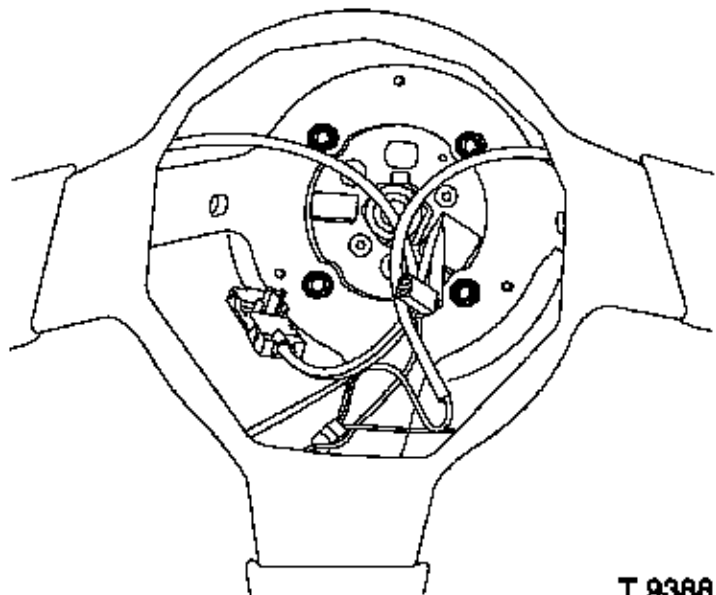

**T 9388**

Steering column upper and lower shrouds – screws (1) and (2).

Release switch from support guide rails – press at points (arrowed).

Harness connector from switch.

**Important:** The switch must not be disassembled.





**Install**

Harness connector to switch.

Switch to support guide rails until clips are heard to snap in to locking position.


Steering column upper and lower shrouds to – screws (1) and (2).

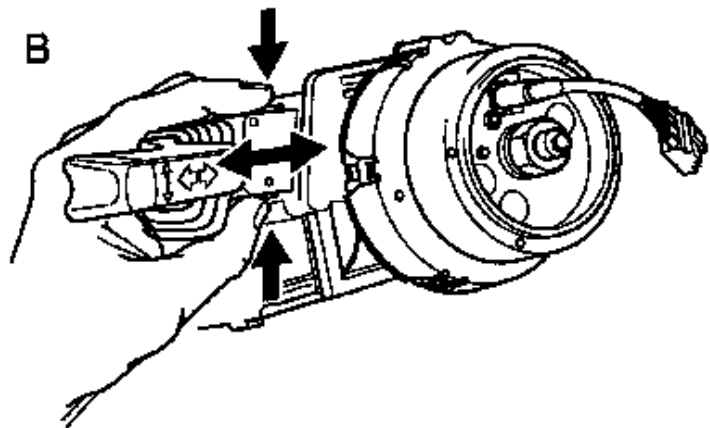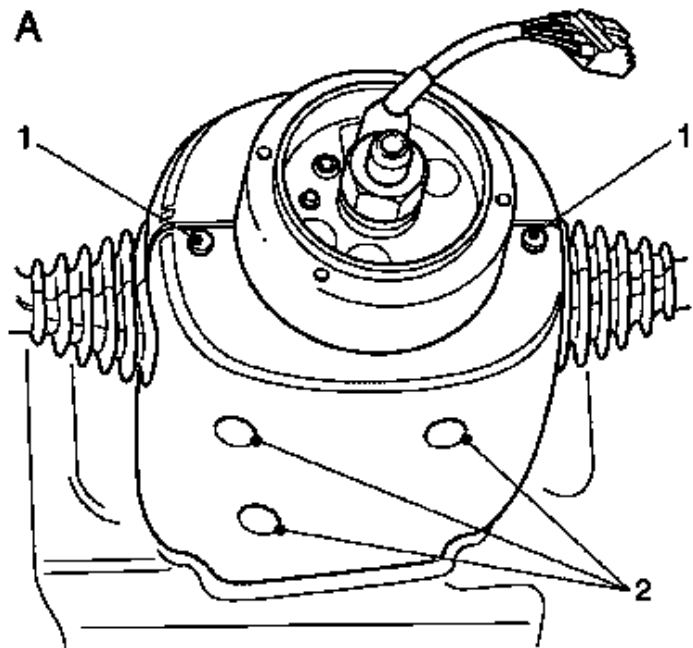

**T 9089**

Steering wheel to hub – 4 bolts.


Horn harness connector.

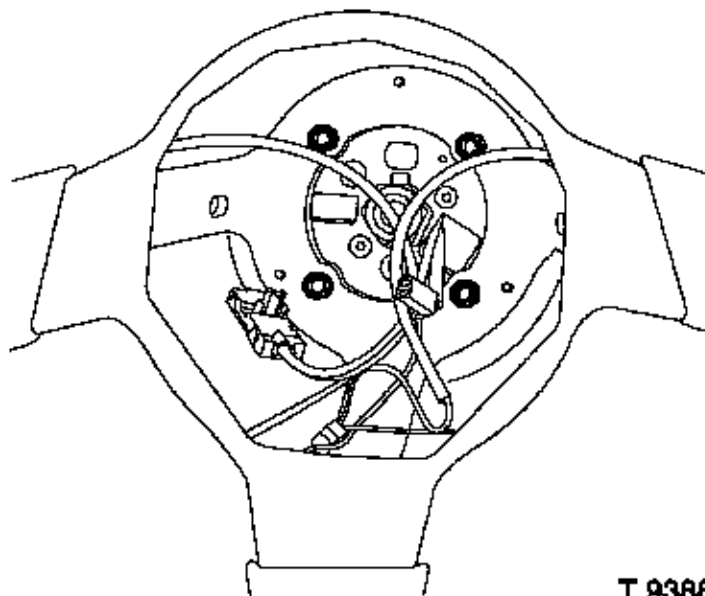

**T 9388**

Driver's air bag to steering wheel – bolts.

Steering wheel is shown removed for clarity.

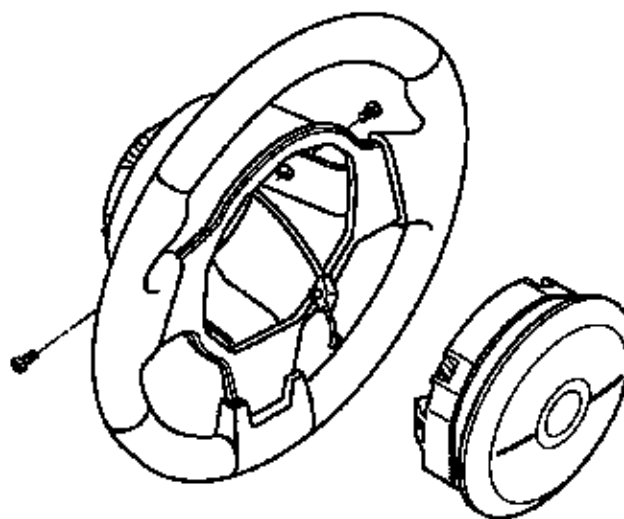

**T 9390**