
Instrument Housing, Remove and Install

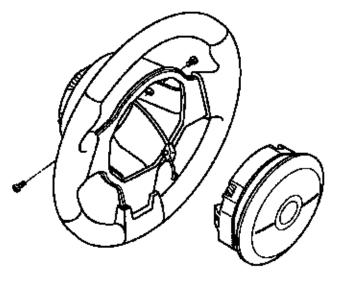

Driver's air bag from steering wheel - bolts.


Horn harness connector.

Steering wheel is shown removed for clarity.




T 9390


Steering wheel from hub – four bolts.

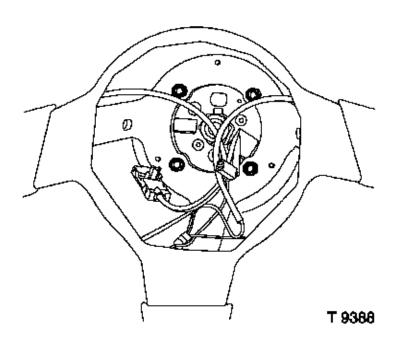

Steering column upper and lower shrouds – screws (1) and (2).

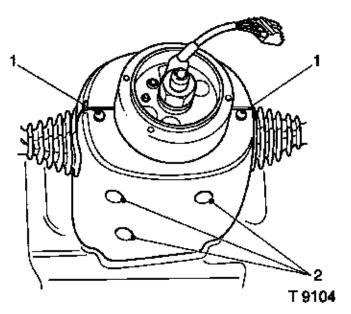

Release instrument housing assembly from instrument panel – screws, harness connector (arrowed).

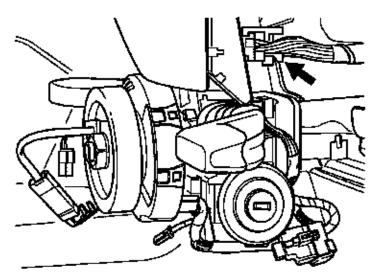


T9096



Instrument housing from cover - nuts.



Instrument housing to cover - nuts.

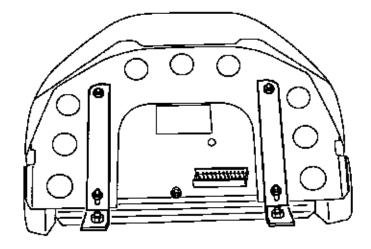


T 9091

♦♦ Install


Harness connector (arrowed) to instrument housing assembly.

Instrument housing assembly to instrument panel – screws.

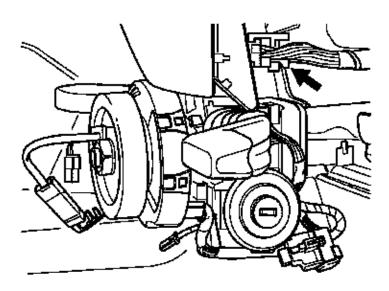


T9096

Steering column upper and lower shrouds – screws.

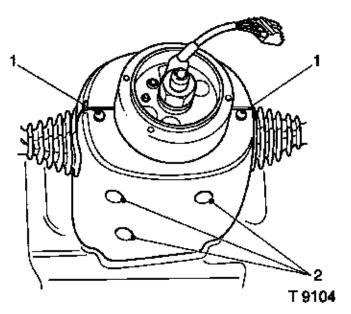


Steering wheel to hub – four bolts.

Horn harness connectors.

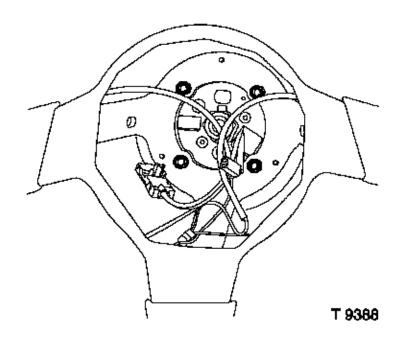

Driver's air bag to steering wheel - bolts.

Steering wheel is shown removed for clarity.

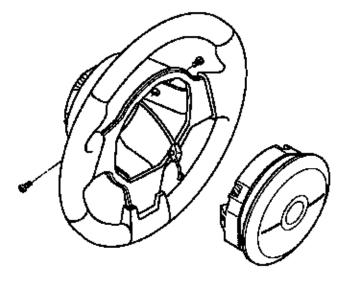

T 9390