


## Upper Wishbone, Remove and Install



### Remove, Disconnect

Clamp for brake hose (1) from upper wishbone - nut.

Upper swivel joint (2) from steering arm - nut, use suitable ball joint remover.

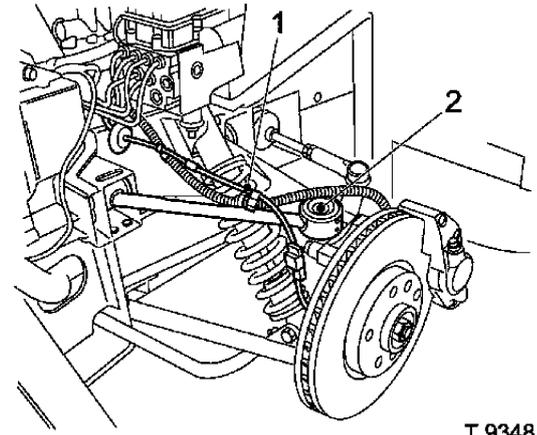

T 9348



### Remove, Disconnect

Upper wishbone from chassis - bolts, nuts, washers, shims; steering rack to be on full lock to provide sufficient clearance for removing rear bolt.




### Important!

Note distribution of shims for caster adjustment.



### Install, Connect

Upper wishbone to chassis - bolts, nuts 45 Nm, washers.

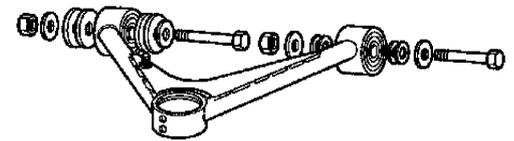


T 9349



### Install, Connect

Upper swivel joint (2) to steering arm - nut 45 Nm.

Clamp (1) for brake hose to upper wishbone - nut.

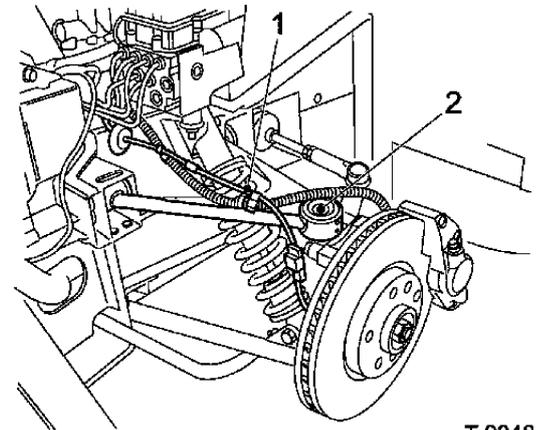

T 9348