



Silencer, Replace (Z22 SE)

Open engine cover.



Remove

Harness connectors (1) for oxygen sensors.

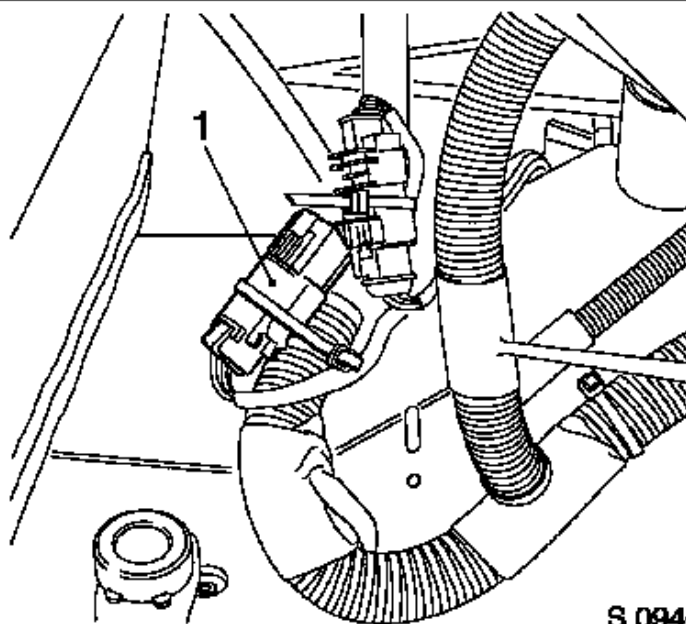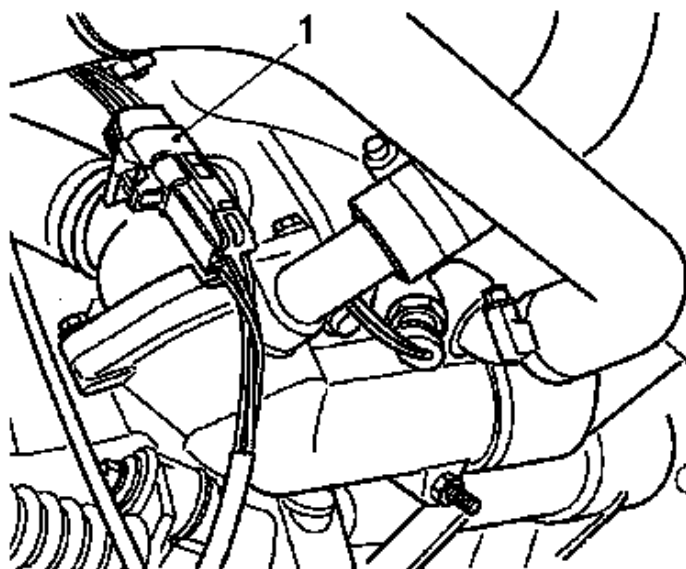

Install


Chocks to front wheels.

Raise vehicle.

**Remove**

Rear undertray (1) – 13 bolts.

Diffuser panel (2) – 7 bolts, 2 clips.

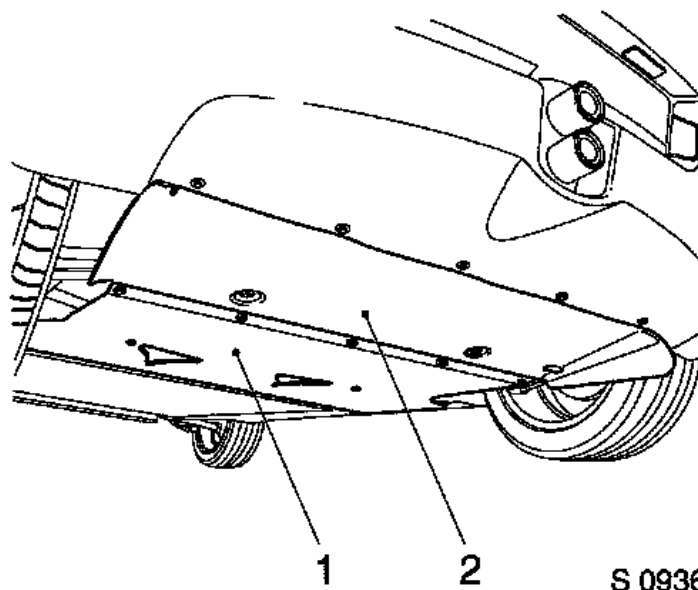


S 0936

Wiring harness from rear subframe – clip.

Wiring harness from heatshield – cable ties, clip.


Wiring harness from wheelarch liner.

Lower heatshield (1) from exhaust manifold – 3 bolts, clip.

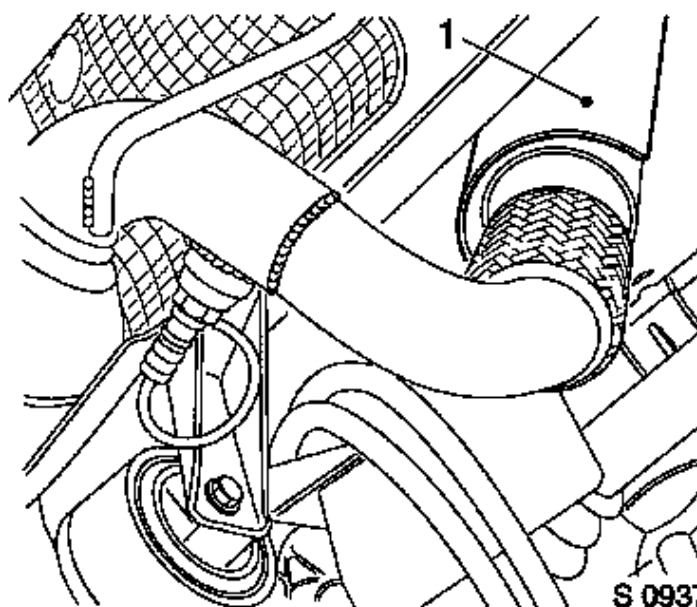


S 0937

Catalytic converter from intermediate pipe – 3 nuts (1).

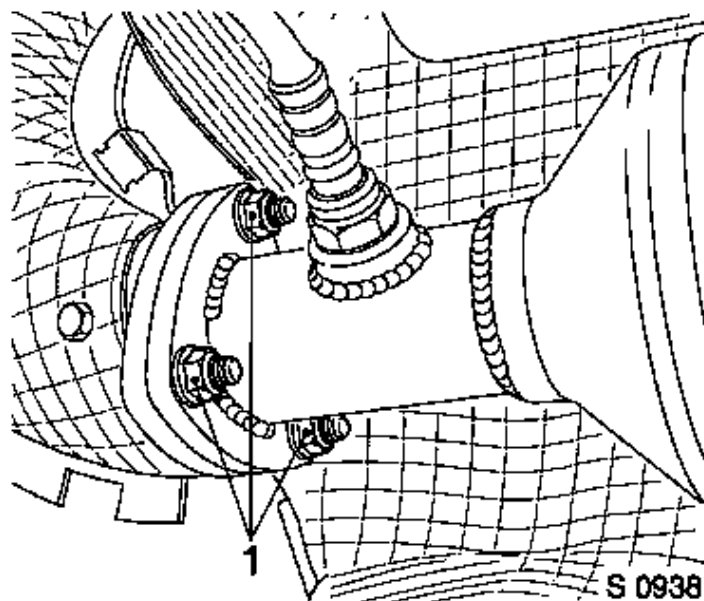


Catalytic converter from exhaust manifold – 3 nuts (1).


Catalytic converter from mounting (2).

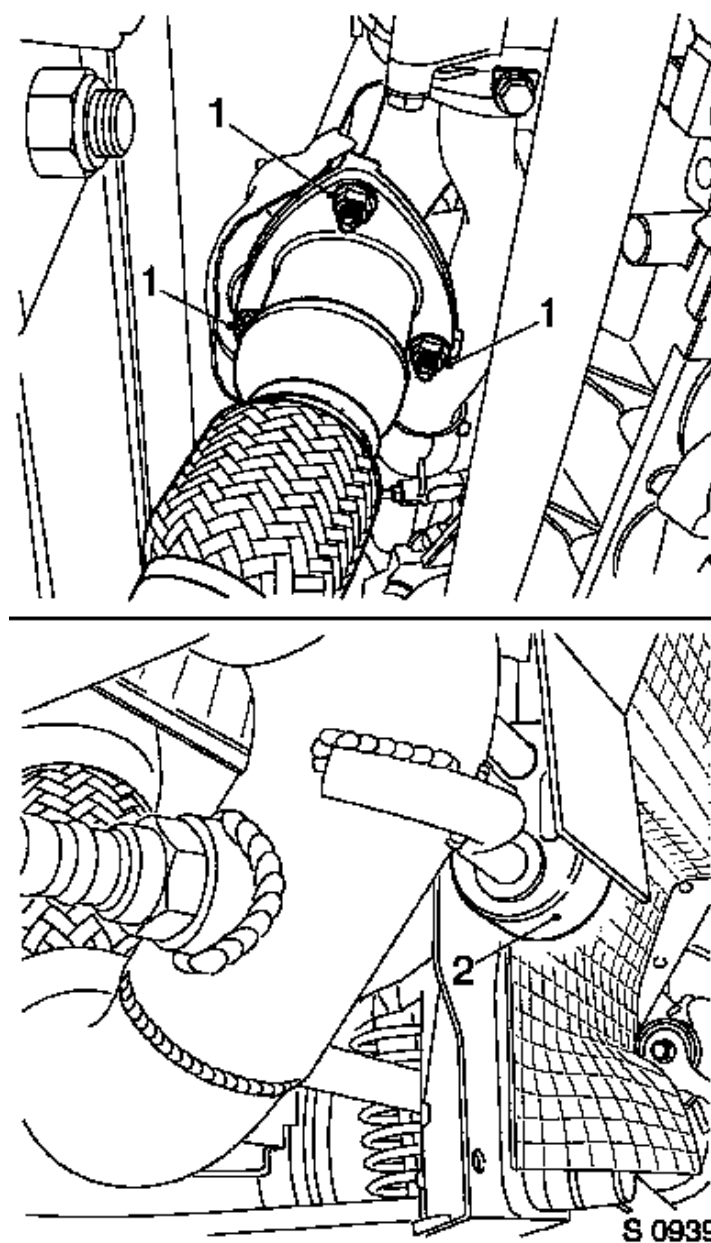

Intermediate pipe from silencer – clamp (1).

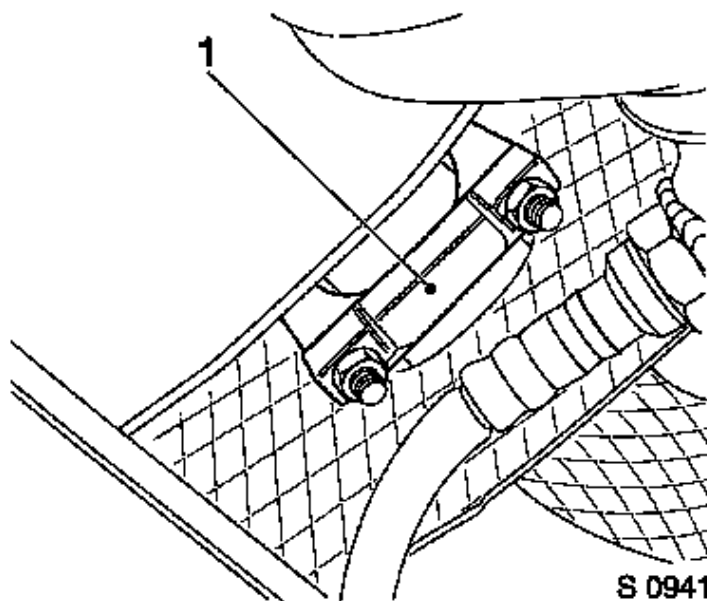

Support bracket, right side (1) – 2 nuts, 2 bolts.

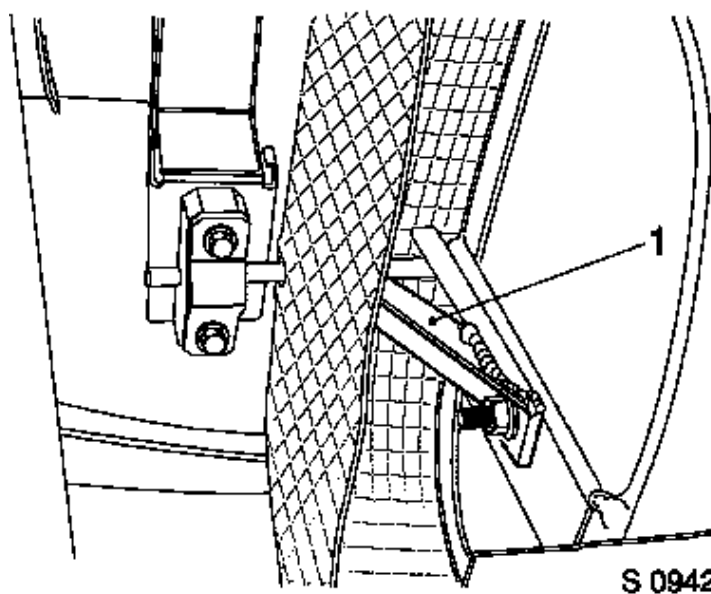

Remove

Support bracket, left side (1) – 2 nuts, 2 bolts.

Silencer from vehicle.




Clean

Gasket faces.

**Install**

Silencer to vehicle.

Support bracket, left side (1) – 2 nuts, 2 bolts.

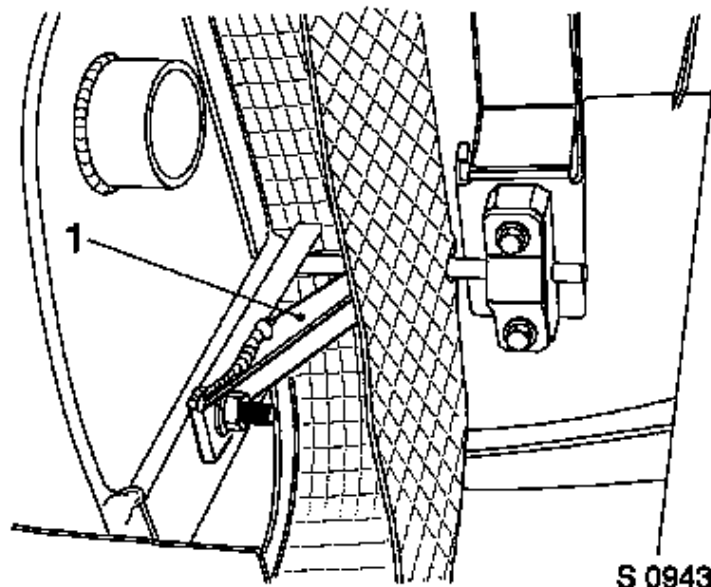**Caution !**

Do not tighten nuts and bolts.


**Install**

Support bracket, right side (1) – 2 nuts, 2 bolts.

Torque


Support bracket, left side – 2 nuts, 2 bolts.

Support bracket, right side – 2 nuts, 2 bolts.

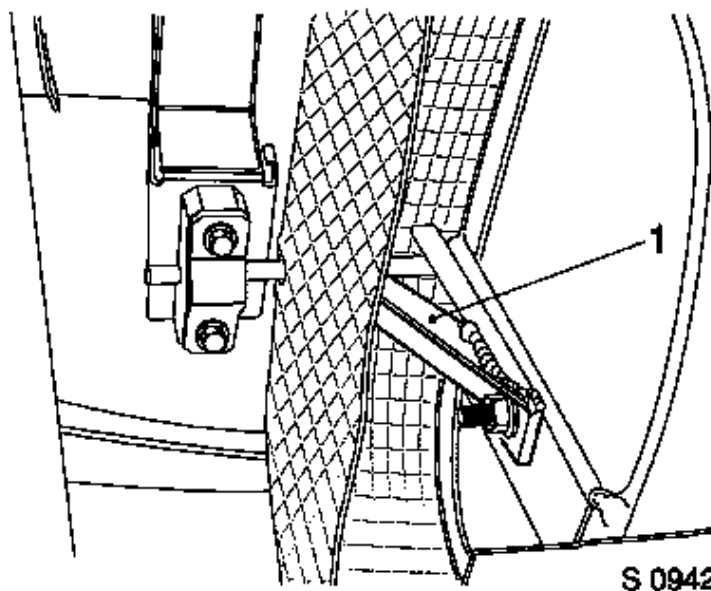


Intermediate pipe to silencer – clamp (1).

Important: Do not tighten clamp.

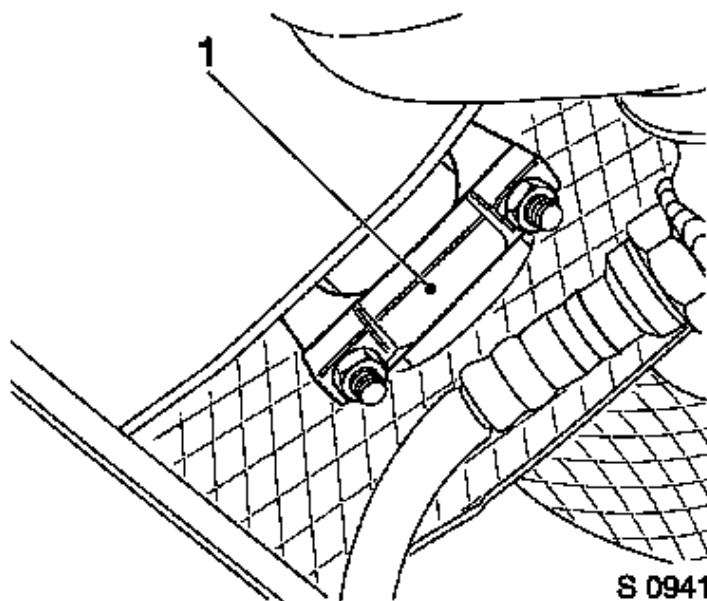

Catalytic converter to exhaust manifold – 3 nuts
(1).


Catalytic converter to mounting (2).

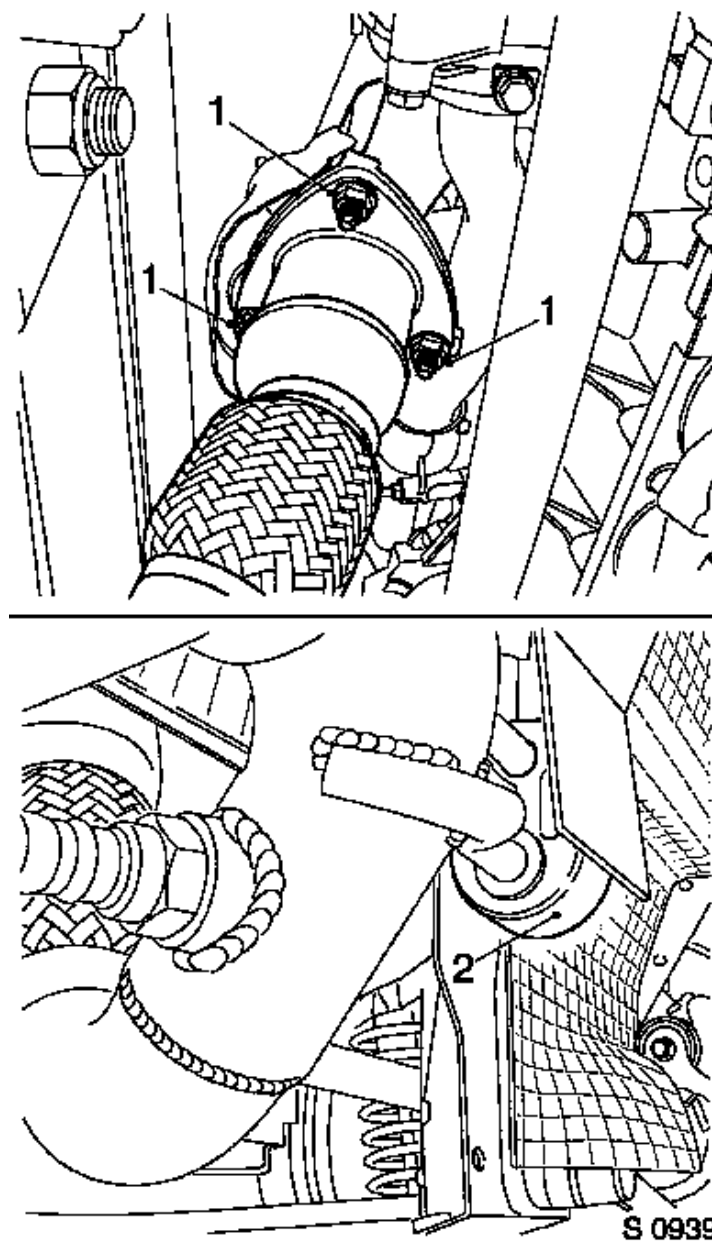**Install**

Catalytic converter to intermediate pipe – 3 nuts
(1).


Torque

Clamp for intermediate pipe to silencer – nuts.

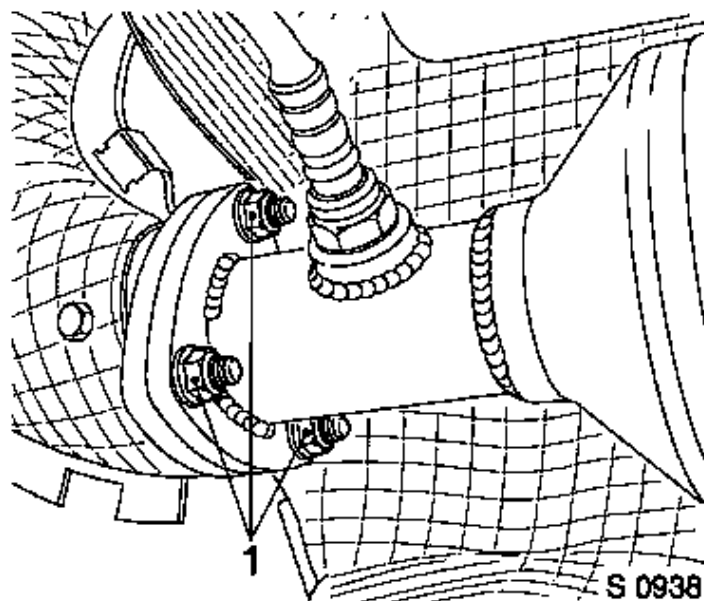

Install

Lower heatshield (1) to exhaust manifold – 3 bolts, clip.

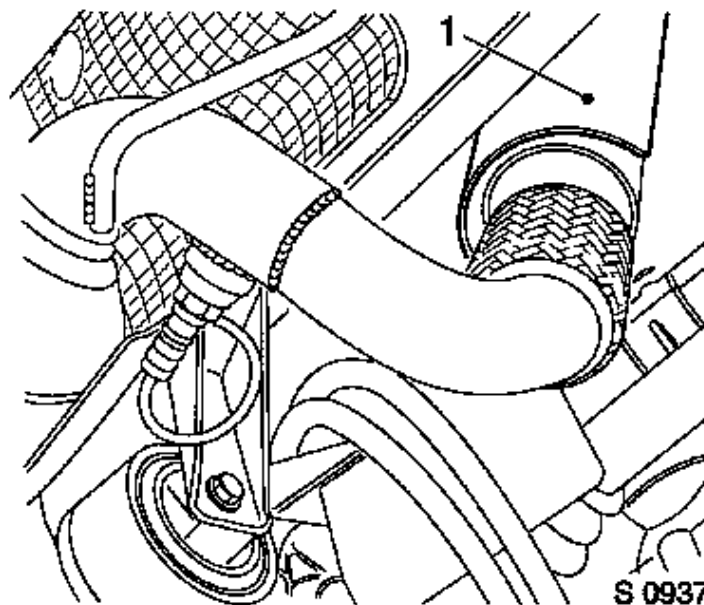

Wiring harness through wheelarch liner.

Wiring harness to rear subframe – clip.

Wiring harness to heatshield – cable ties, clip.



Install

Diffuser panel (2) – 7 bolts, 2 clips.


Important: Do not tighten bolts.



Install

Rear undertray (1) – 13 bolts.

Tighten diffuser and undertray bolts.

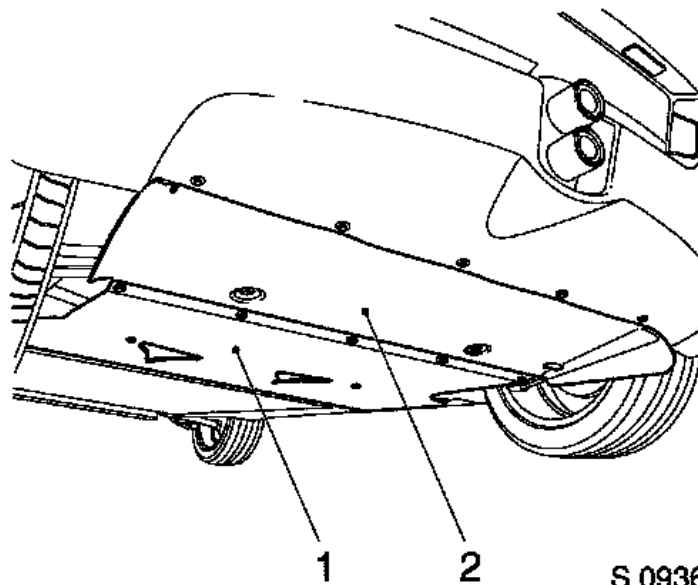

Lower vehicle.

Harness connectors (1) for oxygen sensors.

Close engine cover.



Remove

Chocks from front wheels.

