

Brief Description of Touching-up

Brief Description of Touching-up

Clean and sand damaged area. Apply putty, if necessary. Clean, degrease, apply filler to damaged area. Sand filler.


Matt damaged zone – including adjoining part – using rubbing compound and Scotch Brite Type S ultra fine.

Mix basefix with 200% universal thinner.

Apply this basefix mixture to the entire part in one uninterrupted layer (adhesion for clear-coat).

Apply 1 fading-out mixed clear-coat layer over the repaired zone – 1 fading-out mixed clear-coat layer on the entire surface. Note drying time.

Example: Fault in outer rear quarter panel of body. Touching-up the part with clear coat.

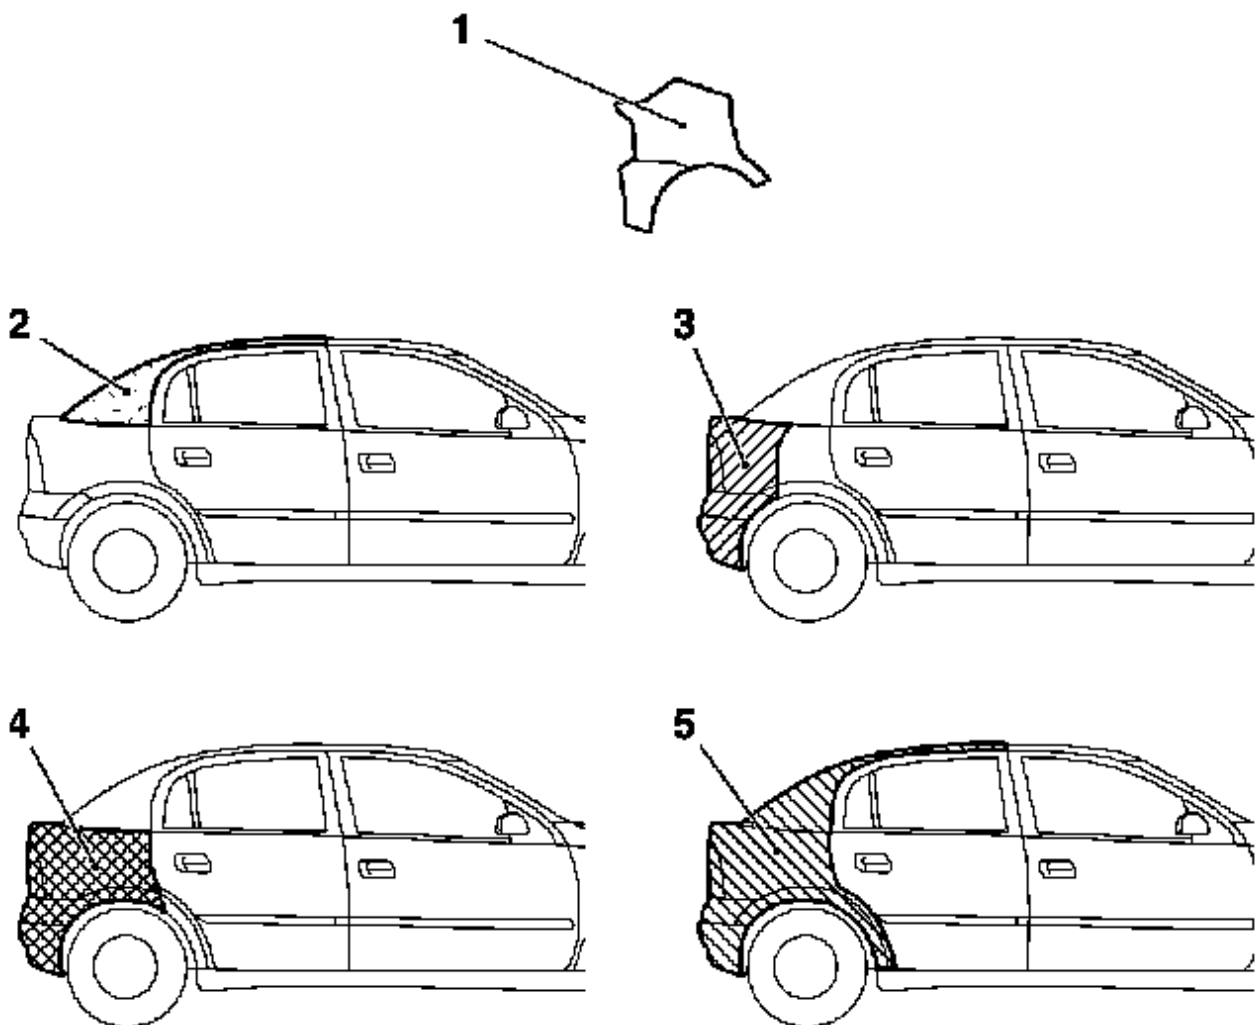

L0008454

Paint system

- 1 New part (or damaged part)
- 2 Apply basefix to repaired and adjoining part/surface

- 3 Apply base paint (to finish-sanded filler and adjoining part)
- 4 Fog zone 1/3
- 5 Apply Clear-coat (complete)