

## Brake Disc, Measure Run-out



**Remove**


Wheel from vehicle – bolts.



**Measure**

Brake disc for run-out at centre of contact surface of brake pad – use dial gauge.

Maximum run-out – **0.03 mm**.

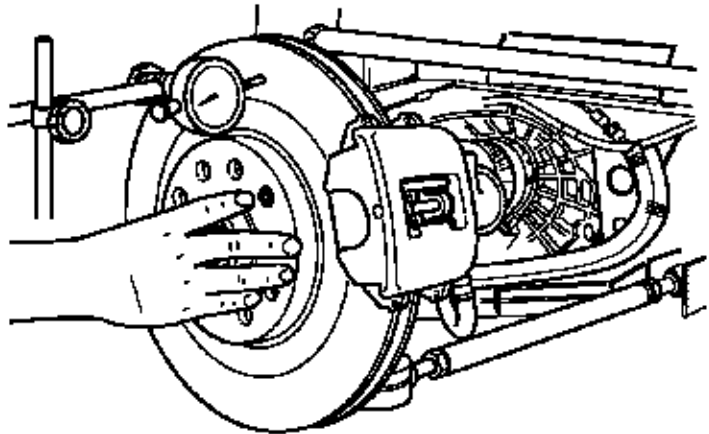

**T 8763**



**Install**

Wheel to vehicle – bolts **90 Nm**.