
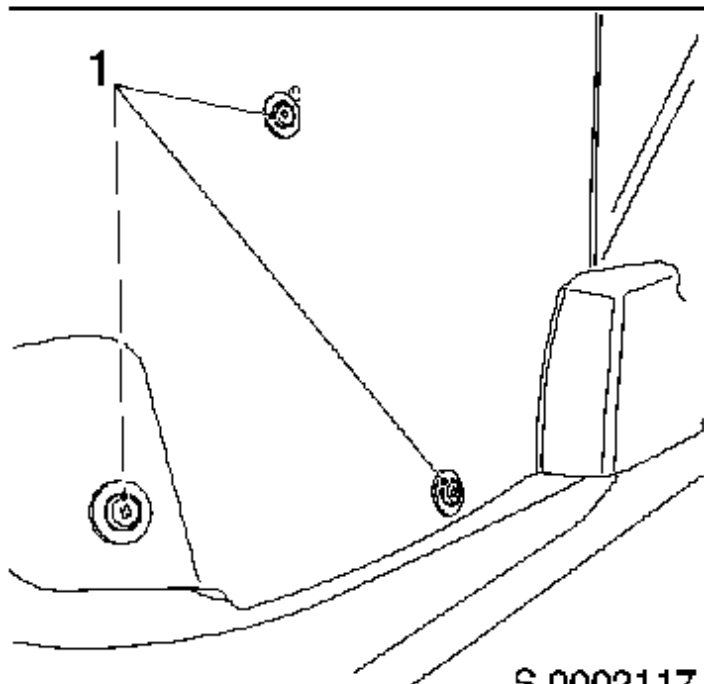


Fog Lamp, Replace


1. Chock rear road wheels
2. Remove front road wheel from vehicle
 - Remove 4x bolt, security bolt
 - Use special socket located under front bonnet
3. For right fog lamp, remove fuse box from right wheelarch liner
 - Remove 4x screw
4. Raise and support vehicle
5. Remove front wheelarch liner from wheelarch
 - Remove 6x screw

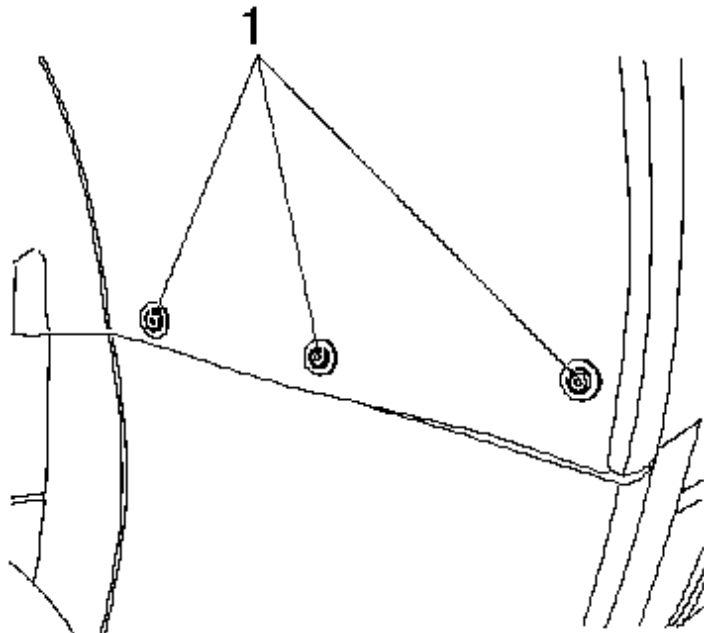


S 0002117

6. Remove headlamp assembly from front clamshell
 - Remove nut (2) , remove support


bracket (1), release harness connector
(3)

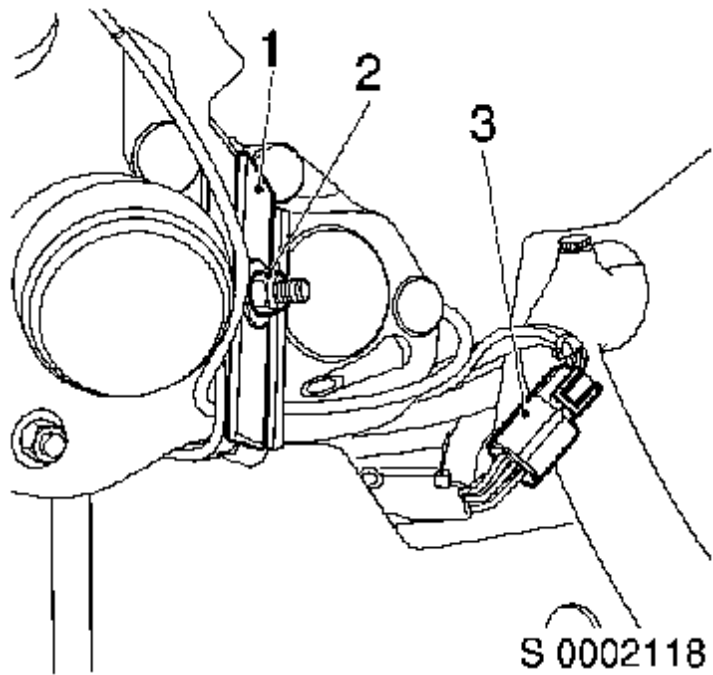

7. Release harness connector (1) from fog lamp

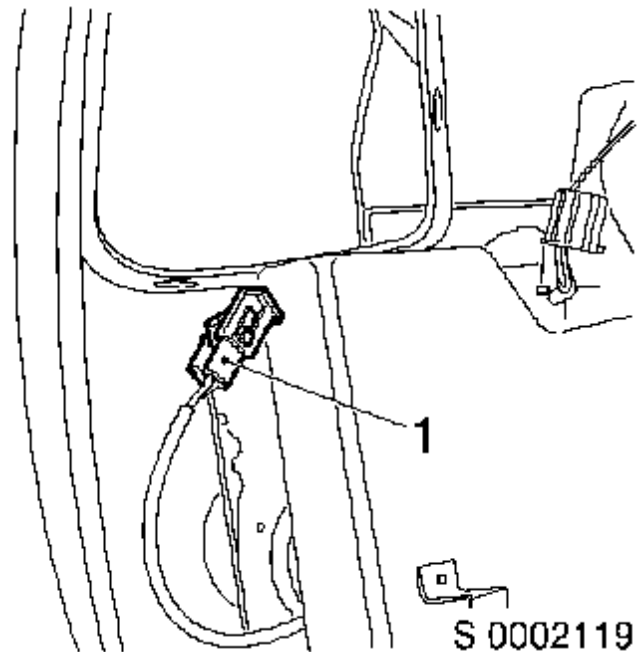

8. Remove dust cover from fog lamp
- Push fit
9. Remove support bracket with fog lamp from front clamshell
- Remove 3x bolt (1), 3x washer

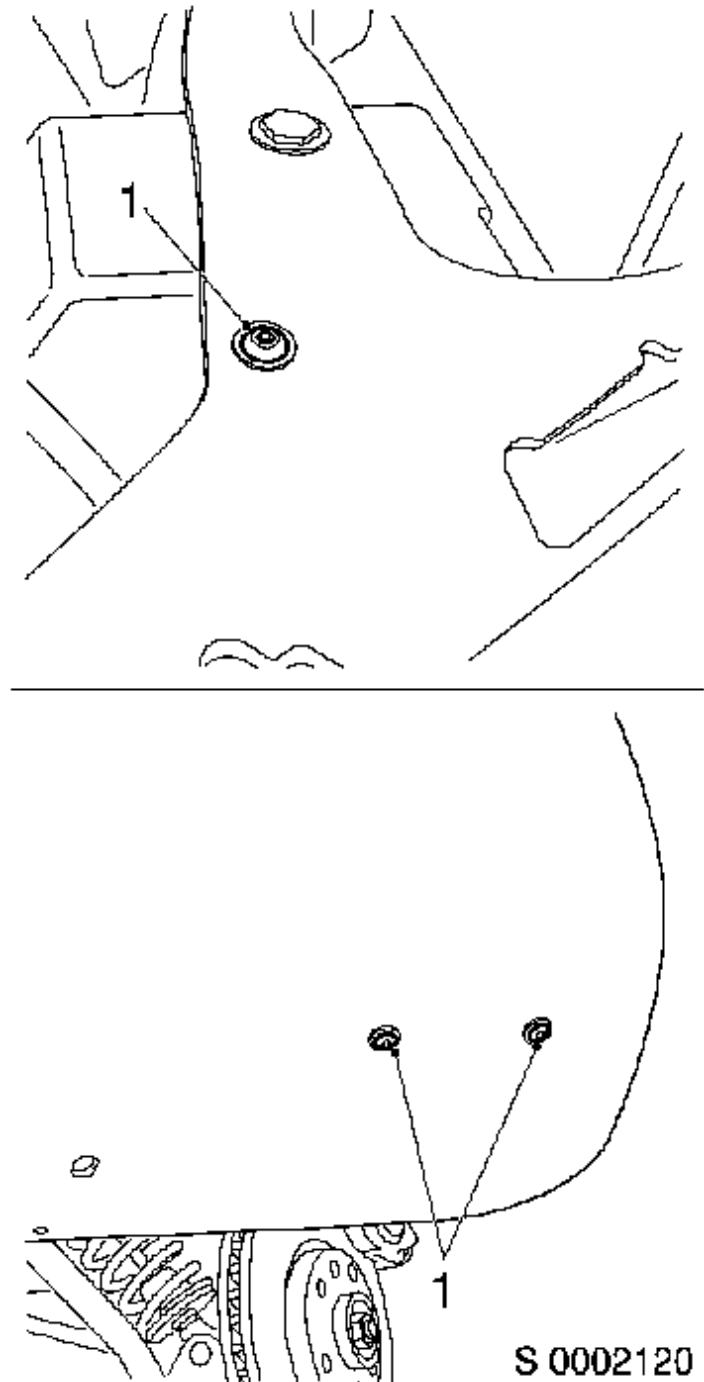

10. Remove fog lamp from support bracket
 - Remove 2x screw, 2x spacer
11. Install fog lamp to support bracket
 - Install 2x screw, 2x spacer
12. Install support bracket with fog lamp to front clamshell
 - Install 3x bolt, 3x washer
13. Install dust cover to fog lamp
 - Push fit
14. Secure harness connector to fog lamp
15. Install headlamp assembly to front clamshell
 - Install nut, support bracket, harness connector
16. Adjust headlamp and fog lamp

17. Install front wheelarch liner to wheelarch
 - Install 5x screw, clip
18. For right fog lamp, install fuse box to right wheelarch liner
 - Install 4x screw
19. Install front road wheel to vehicle
 - Install 4x bolt, install security bolt (**90 Nm**)
20. Raise vehicle and remove support
21. Remove chocks from rear road wheels