



Catalytic Converter, Remove and Install

Open engine cover.



Remove

Harness connectors (1) for oxygen sensors.

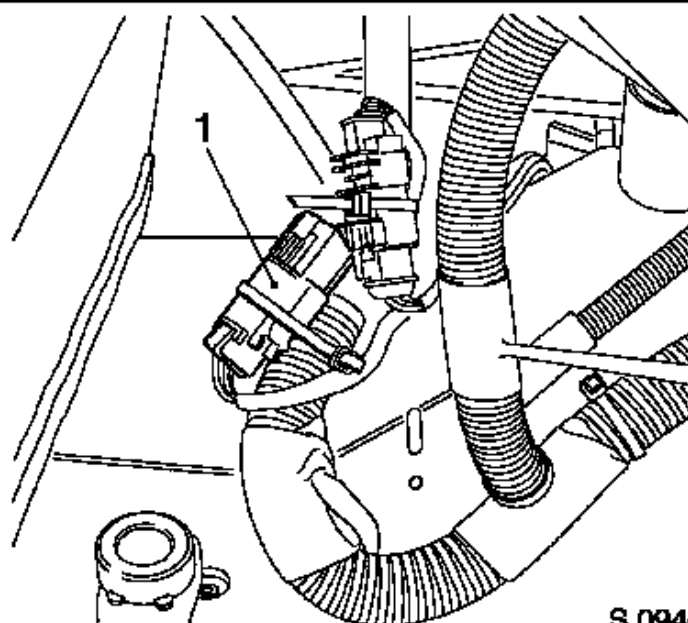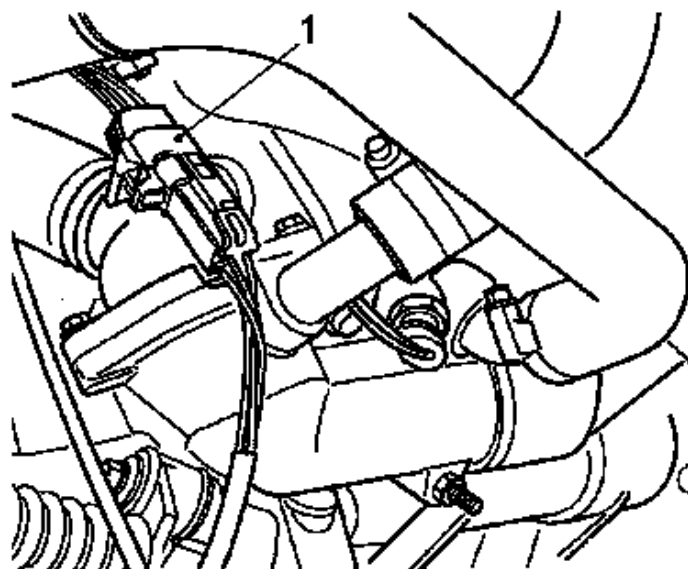

Install


Chocks to front wheels.

Raise vehicle.

**Remove**

Rear undertray (1) – 13 bolts.

Diffuser panel (2) – 7 bolts, 2 clips.

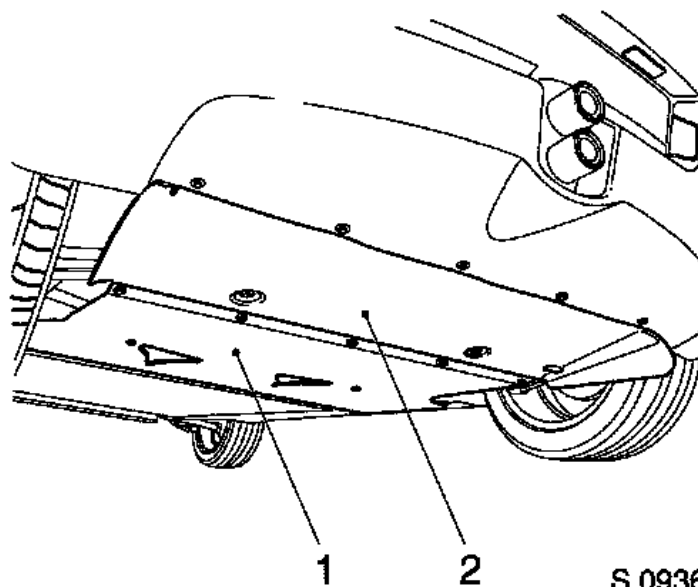
**S 0936**

Wiring harness from rear subframe – clip.


Wiring harness from heatshield – cable ties, clip.

Wiring harness from wheelarch liner.

Lower heatshield (1) from exhaust manifold – 3 bolts, clip.

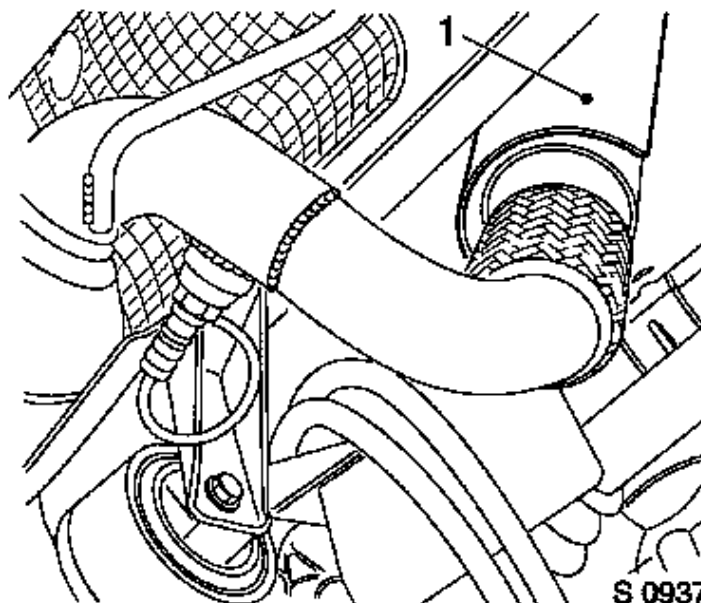**S 0937**

Catalytic converter from intermediate pipe – 3 nuts (1).

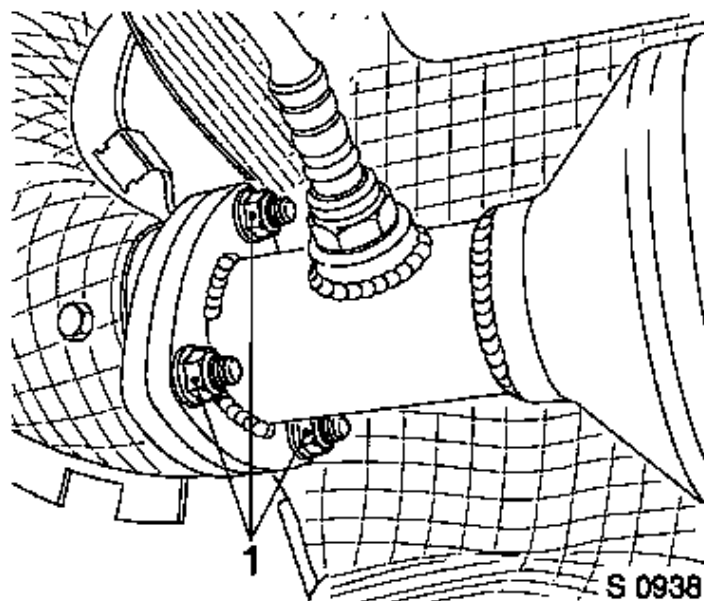

Catalytic converter from exhaust manifold – 3 nuts (1).

Catalytic converter from mounting (2).



Clean


Gasket faces.




Install

Catalytic converter to exhaust manifold – 3 nuts (1).


Catalytic converter to mounting (2).

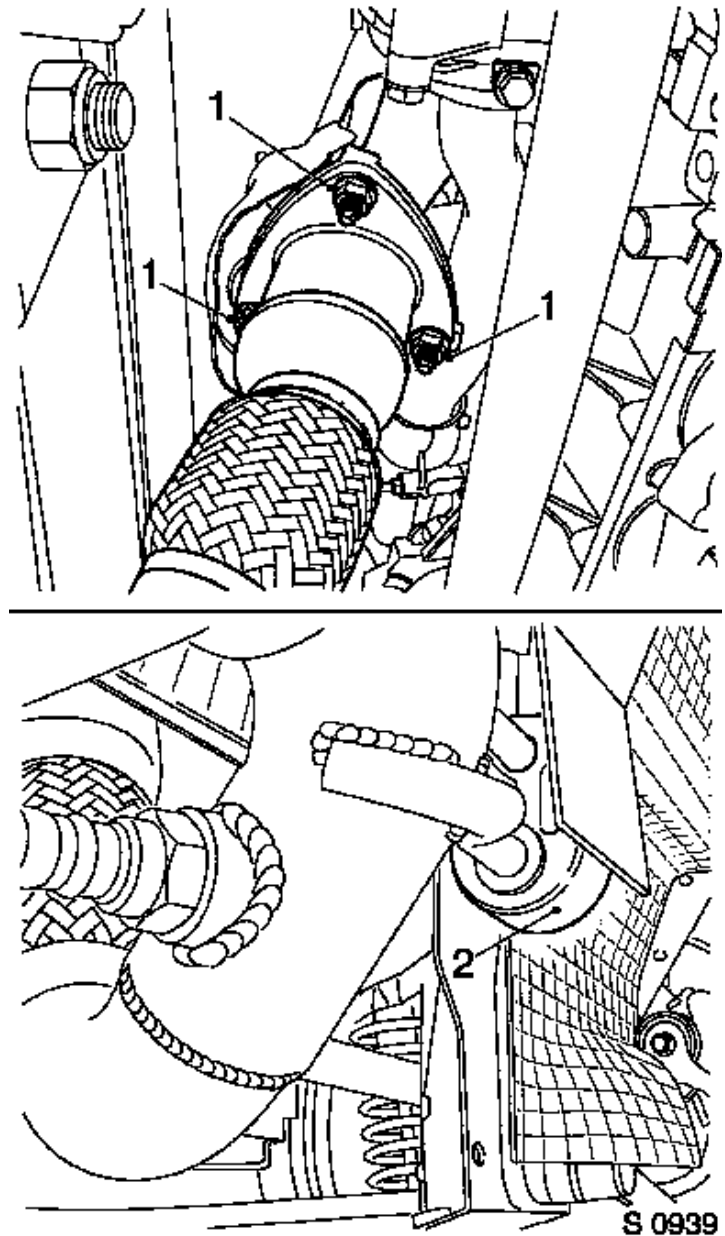

Catalytic converter to intermediate pipe – 3 nuts
(1).

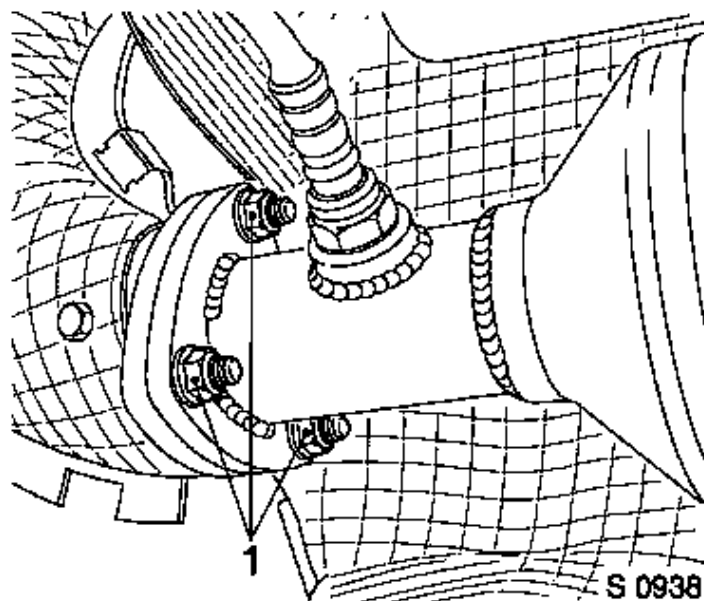

Lower heatshield (1) to exhaust manifold – 3 bolts, clip.

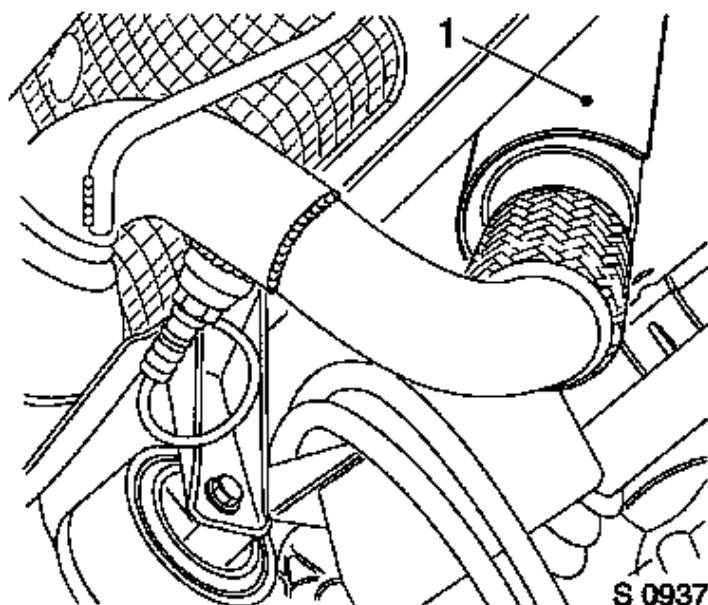

Wiring harness through wheelarch liner.

Wiring harness to rear subframe – clip.

Wiring harness to heatshield – cable ties, clip.



Install


Diffuser panel (2) – 7 bolts, 2 clips.

Important: Do not tighten bolts.

**Install**

Rear undertray (1) – 13 bolts.

Tighten diffuser and undertray bolts.

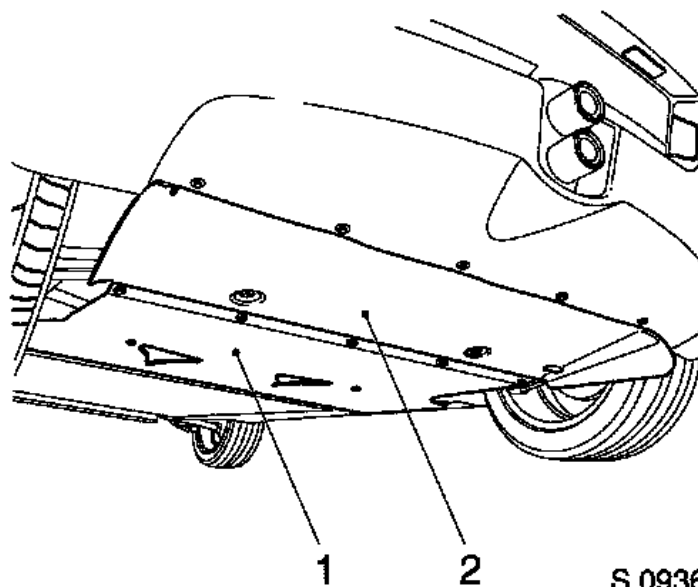

Lower vehicle.



**Install**

Harness connectors (1) for oxygen sensors.

Close engine cover.

**Remove**

Chocks from front wheels.

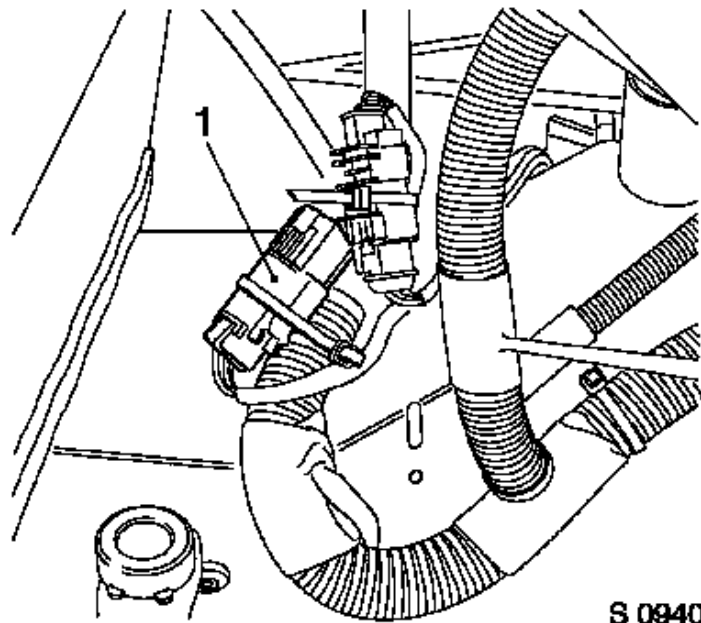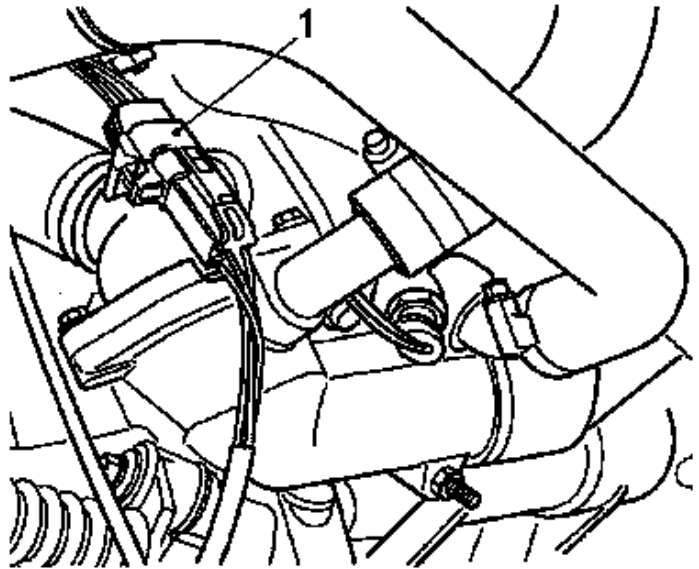

S 0940