



Fuel Evaporation Tank, Replace

1. Chock front road wheels
2. Remove security bolt from right rear road wheel
 - Use special socket located under front bonnet
3. Release wash reservoir from bracket, then position to one side


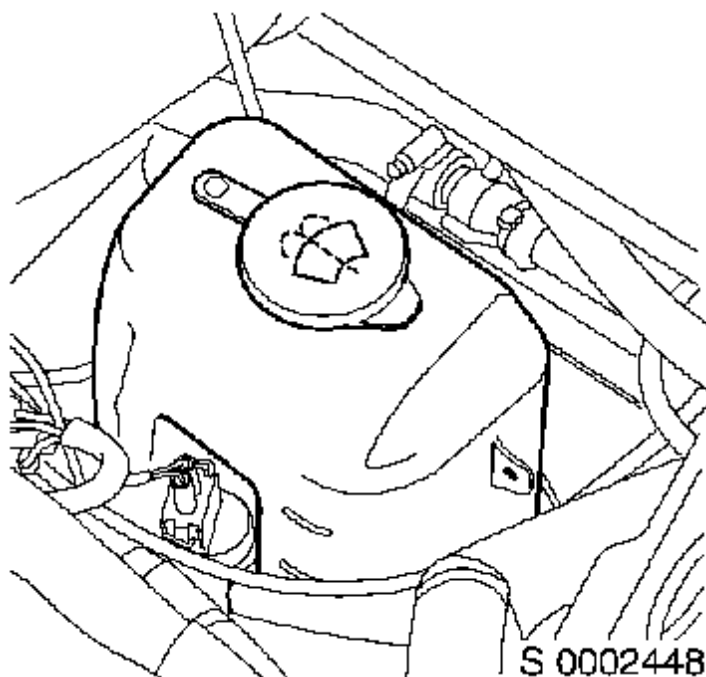


4. Disconnect battery negative lead
 - Release nut

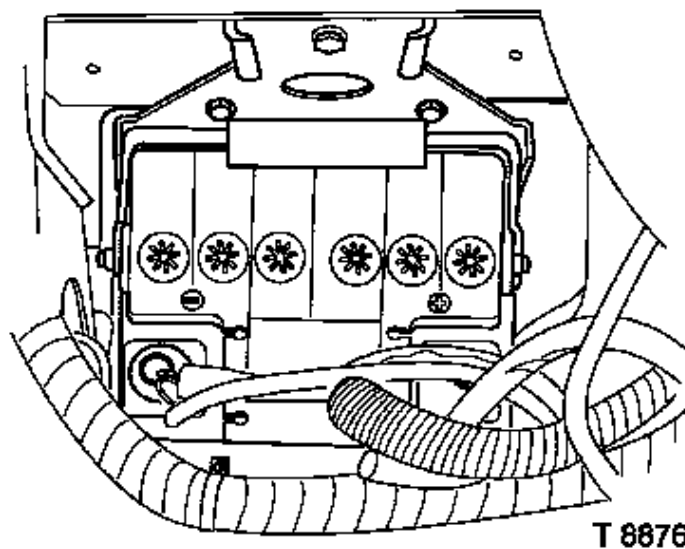


5. Raise and support vehicle
 - Support vehicle at furthest jacking point to rear
6. Lower vehicle to midway position
7. Remove rear road wheel from right side
 - Remove security bolt
 - Use special socket located under front bonnet

- Remove 4x wheel bolt
8. Remove rear wheelarch liner, right side
- Remove 6x screw

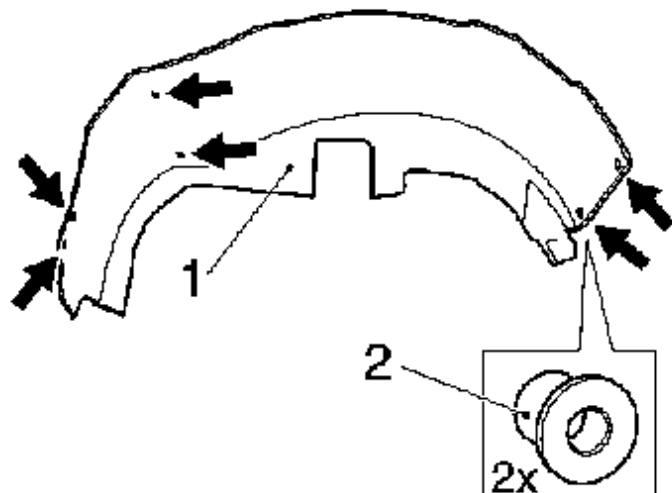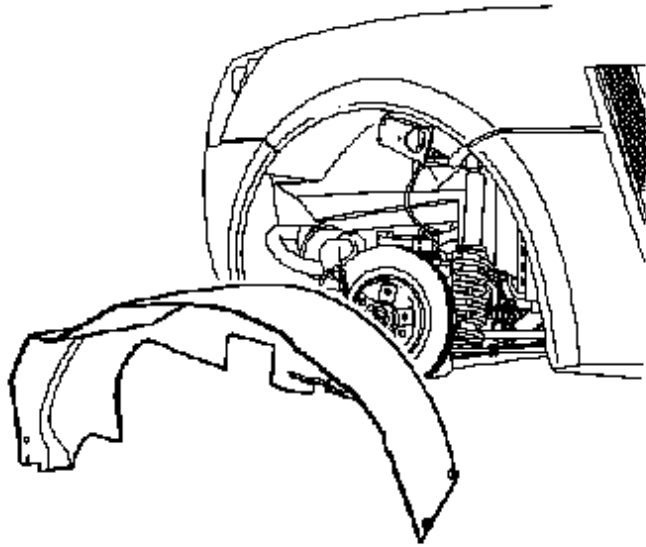


S 0002479

9. Release 3x hose (1) from fuel evaporation tank
- Release 2x clip (2)

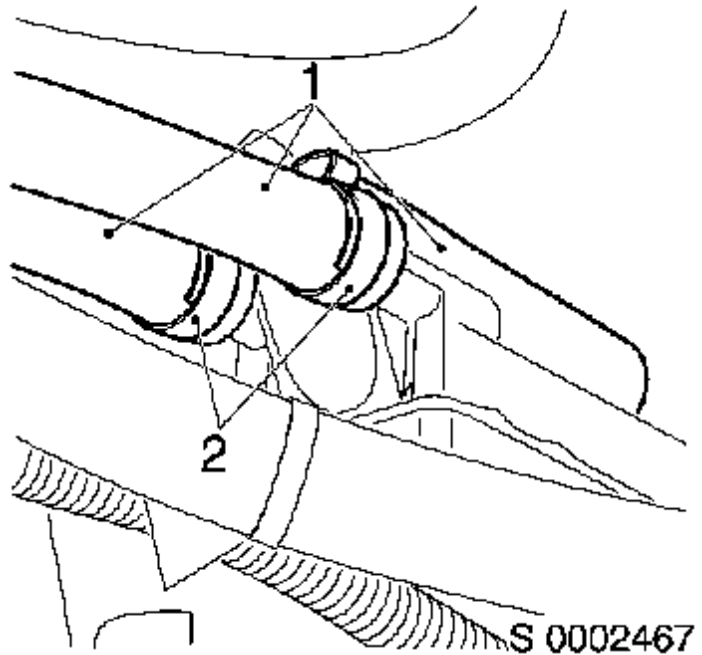

10. Remove fuel evaporation tank from bracket
 - Remove nut, washer, bolt
11. Install new fuel evaporation tank to bracket
 - Install bolt, washer, nut

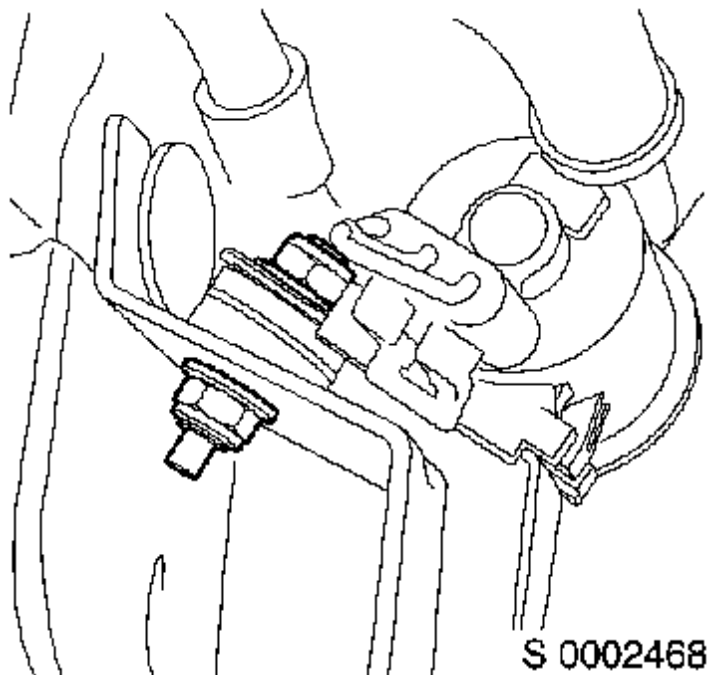

12. Secure 3x hose to fuel evaporation tank
 - Secure 2x new clip
13. Install rear wheelarch liner, right side
 - Install 6x screw
14. Install rear wheel to right side
 - Install 4x bolt, security bolt
 - Do not tighten
15. Remove support from vehicle and lower
16. Tighten rear road wheel, right side
 - Tighten 4x bolt, security bolt **90 Nm**

17. Remove chock from front road wheels
18. Connect battery negative lead
 - Secure nut
19. Secure wash reservoir to bracket
20. Program all volatile memories