


## Track Control Arm, Remove and Install




### Remove

1. Remove rear brake pads from caliper - see operation "Brake Pads, Rear, Replace" in group H

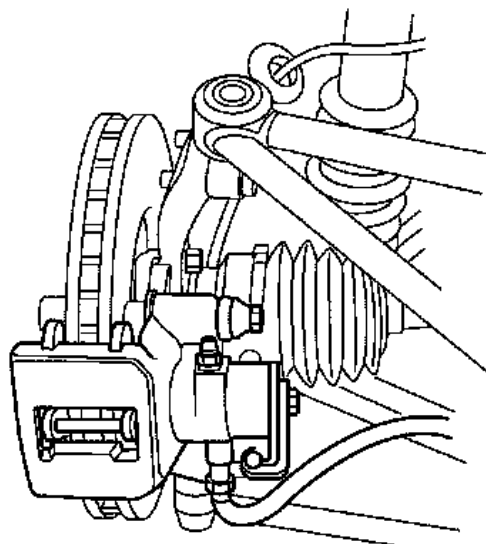

T 8772

2. Remove track control arm from hub carrier  
**Note:** Illustration shows wheel hub and drive shaft removed for clarity
  - Remove nut, conical spacer, spacer
3. Release track control arm from lower wishbone
  - Remove nut

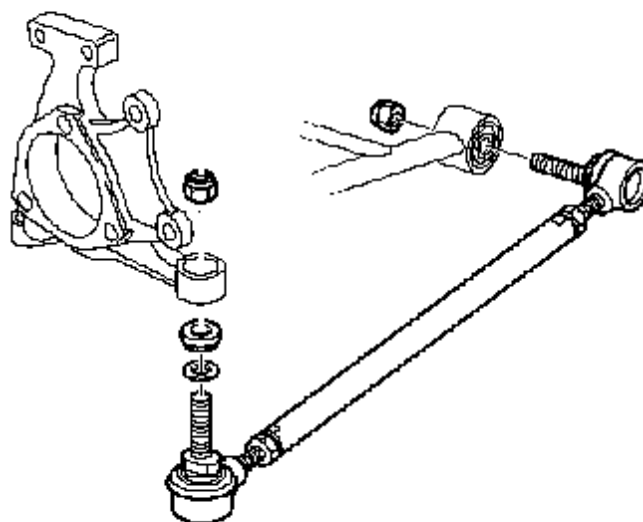

S 0002223




### Install

**Important:** End of track control arm locates into chassis. Ensure correct new locking nut is used. Early type have coarse thread, later type have fine thread.

4. Install new track control arm to lower wishbone
  - Install new nut **45 Nm**

5. Install track control arm to hub carrier
  - Install spacer, conical spacer, new nut **45 Nm**
6. Install rear brake pads to caliper - see operation "Brake Pads, Rear, Replace" in group H

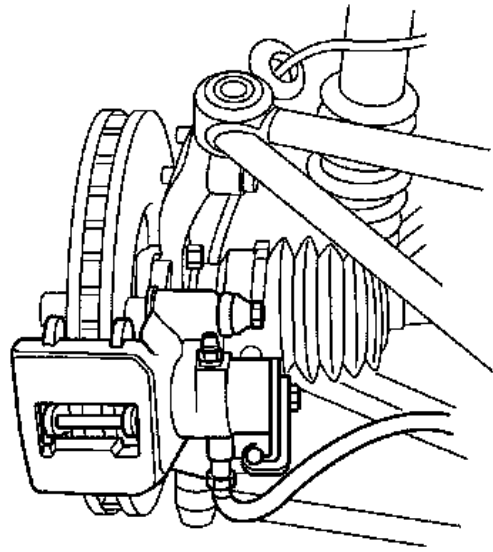

T 8772